Cadillac



Infotainment System


2014 Cadillac CUE Infotainment System 🕮

nfotainment System 3	3
Introduction3Infotainment3Steering Wheel Controls9Software Updates10)
Radio 10 AM-FM Radio 10 Radio Reception 15 Backglass Aerial 16 Multi-Band Antenna 16	;
Audio Players 16 CD Player 16 USB Port 19 SD Card Reader 23 Auxiliary Jack 23 Bluetooth Audio 24	
Rear Seat Infotainment 25 Rear Seat Entertainment (RSE) System 25	

Navigation	43
System	43
Maps	49
Navigation Symbols	
Destination	
Settings	66
Global Positioning	
System (GPS)	67
Vehicle Positioning	67
Problems with Route	
Guidance	68
If the System Needs	
Service	69
Map Data Updates	69
Database Coverage	
Explanations	69
·	
Voice Recognition	60

Phone	
Bluetooth (Infotainment Controls)	77
Recognition)	82 83
Settings	84
Trademarks and Licence	
Agreements	87
ndex	i-1

Introduction Infotainment

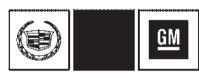

The names, logos, emblems, slogans, and vehicle body designs appearing in this manual including, but not limited to, GM, the GM logo, CADILLAC, CADILLAC Crest & Wreath and CADILLAC CUE are registered trademarks of General Motors LLC., its subsidiaries, affiliates, or licensers.

This manual describes features that may or may not be on your specific vehicle either because they are options that you did not purchase or due to changes subsequent to the printing of this owner manual. Please refer to the purchase

documentation relating to your specific vehicle to confirm each of the features found on your vehicle.

Keep this manual with the owner manual in the vehicle, so it will be there if it is needed. If the vehicle is sold, leave this manual in the vehicle.

Read the following pages to become familiar with the infotainment system features.

Marning

Taking your eyes off the road for too long or too often while using any infotainment features can cause a crash resulting in injury or death. Do not give extended attention to infotainment tasks while driving. Focus your attention on driving and limit glances to the instrument cluster or centre stack screens. Use voice guidance directions whenever possible.

The infotainment system has built-in features intended to help prevent distracted driving by disabling some functions. A greyed-out function is not available for different reasons, but the most significant reason is when the vehicle is moving.

Many primary infotainment features are also available by using the instrument cluster and steering wheel controls.

Before driving:

- Become familiar with the operation, buttons on the faceplate, and screen buttons.
- Set up the audio by setting favourite stations, setting the tone, and adjusting speakers.
- Set up phone numbers in advance so they can be called by pressing a single button or by using a single voice command if equipped with Bluetooth[®] phone capability.

Customer Assistance

Assistance is available to help with Bluetooth pairing, other mobile device interface, and operation support of the CUE infotainment system. Contact your dealer for more information.

Infotainment System

The infotainment system is controlled by using the touchscreen, the buttons below the touchscreen. steering wheel controls, and voice recognition.



- (Power and Mute)
- 2. Volume
- 3. (Home Page)

Power (On/Off/Mute)

- When off, press \circlearrowleft (1) to turn the system on. Press and hold to turn off.
- When on, press \circlearrowleft to mute the system. Press \circlearrowleft again to unmute the system.

Retained Accessory Power (RAP)

The vehicle has RAP. When in RAP the audio system can be played even after the ignition is turned off. See "Retained Accessory Power (RAP)" in the owner manual.

Volume

The black area above the chrome bar (2) is used to increase or decrease the volume. There are three ways to adjust the volume:

Slide a finger.

- Press.
- Press and hold

Home Page



The Home Page is where application icons are accessed. Some features are disabled when the vehicle is moving.

The Home Page can be set up to have up to five pages with eight icons per page.

Press the left \ll or right \gg or slide finger left/right across the screen to access the pages of icons.

 Next): Press to go to the next Home Page.

≪ (Previous): Press to go to the previous Home Page.

★ (Interaction Selector): Press to display the favourites list.

Press and hold a location within the favourites area to begin the process of saving a favourite application.

Press the application icon to store as a favourite, and the name of the application will be shown in favourites.

Home: Press to go back to the Home Page to start a different application.

Managing Home Page Icons

- 1. Press and hold any of the Home Page icons to edit that icon.
- 2. Drag the icon to a new location on the Home Page or to save it to the applications tray.
- 3. Press to exit edit mode.

Audio

Press the AUDIO icon to display the active audio source page. Available sources are AM, FM, CD, My Media, USB, SD, Bluetooth, and AUX Input.

Phone

Press the PHONE icon to display the Phone main page. See Bluetooth (Overview) on page 76 or Bluetooth (Infotainment Controls) on page 77 or Bluetooth (Voice Recognition) on page 82.

NAV (Navigation, If Equipped)

Press the NAV icon to display the navigation map. See *Using the Navigation System on page 43*.

Apps

If equipped, this feature is available through the Apps icon on the radio Home Page. Downloading and using Apps requires a Bluetooth Internet connection as part of a smartphone or other mobile device data service plan. On most smartphones, activation is in the

device's Settings menu under Mobile Network Sharing, Personal Hotspot, Mobile Hotspot, Bluetooth Tethering, or similar. After activation of the hotspot on the smartphone, complete the Bluetooth pairing process using the Phone icon on the radio Home Page. After pairing the phone, press the Apps icon on the radio Home Page. Follow the prompts to configure the Internet connection and set up an account.

Settings

Press the SETTINGS icon to display the Settings menu. See Settings on page 84.

Energy

Press the ENERGY leaf icon to display energy flow on the hybrid vehicle. See the owner manual.

Phone (Voice Recognition, If Equipped)

Press the PHONE microphone icon on the Home Page to access the Bluetooth Speech Recognition main page. See *Voice Recognition on page 69*.

Climate

Press the CLIMATE icon to display the Climate main page. See "Dual Automatic Climate Control System" in the owner manual.

Rear Climate (If Equipped)

Press the R. CLIMATE icon to display the Rear Climate main page. See "Rear Climate Control System" in the owner manual.

Video (If Equipped)

Press the VIDEO icon to display the video Rear Seat Entertainment main page. See Rear Seat Entertainment (RSE) System on page 25.

Applications Tray



The applications tray is at the top-centre of the screen. The applications tray can have three to five applications.

To add an application from the Home Page to the applications tray:

- 1. Press and hold any icon on the Home Page to enter edit mode.
- 2. Drag the icon to the applications tray.

To remove an item from the applications tray, drag the icon from the applications tray back to the Home Page.

Adding or removing applications from the applications tray will not remove them from the Home Page.

Touchscreen Buttons

Touchscreen buttons show on the screen when available. When a function is unavailable, the button may grey-out. When a function is selected, the button may highlight.

Proximity Sensing

The infotainment system uses proximity sensing. When enabled, certain screen buttons and features will become visible when a hand approaches the screen. When the hand is removed, these features fade.

Haptic Feedback

Haptic feedback is a pulse that occurs when a button is pressed on the screen or when buttons below the screen are pressed.

Infotainment Gestures


Use the following finger gestures to control the infotainment system.

Press/Tap




Press/Tap is used to select a button or option, activate an application, or change the location inside a map.

Press and Hold

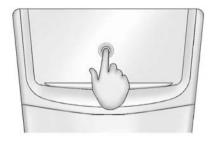

Press and hold can be used to start another gesture, move, or delete an application.

Drag

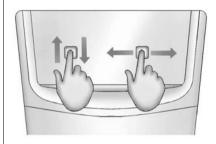


Drag is used to move applications on the Home Page, or to pan the map. To drag the item, it must be held and moved along the screen to the new location. This can be done up, down, right, or left.

Nudge




Nudge is used to move items a short distance on a list or a map. To nudge, hold and move the selected item up or down to a new location.

Fling or Swipe

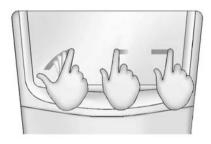


Fling or swipe is used to scroll through a list, pan the map, or change page views. Do this by placing a finger on the screen then moving it rapidly up and down or right and left.

Spread

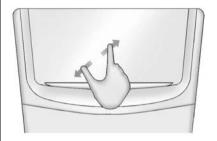

Spread is used to zoom in on a map, certain images, or web page. Place finger and thumb together on the screen, then move them apart.

Pinch

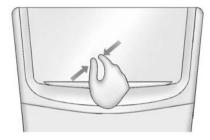

Pinch is used to zoom out on a map, certain images, or a web page. Place finger and thumb apart on the screen, then move them together.

Cleaning High Gloss Surfaces and Vehicle Information and Radio Displays

For vehicles with high gloss surfaces or vehicle displays, use a microfiber cloth to wipe surfaces. Before wiping the surface with the microfiber cloth, use a soft bristle brush to remove dirt that could scratch the surface. Then use the microfiber cloth by gently rubbing to clean. Never use window cleaners or solvents. Periodically hand wash the microfiber cloth separately, using mild soap. Do not use bleach or fabric softener. Rinse thoroughly and air dry before next use.

Steering Wheel Controls

The infotainment steering wheel controls can be used to control the infotainment features displayed in the instrument cluster.

When in Valet Mode (if equipped), access to the infotainment functions is disabled. See *Settings on page 84*.



(End Call): Press to decline an incoming call, or end a current call. Press to mute or unmute the infotainment system when not on a call.



Or > (Previous or Next): Press
 the five-way control to the left or
 right to go to the previous or next
 area in the display or to the previous
 or next menu.

∧ or V (Previous or Next):
Press the five-way control up or
down to go up or down in a list
or page.

SEL: Press to select a highlighted menu item.

 \Box + or \Box - (Volume): Press to increase or decrease the volume.

Software Updates

media source.

Contact your dealer for website information.

Radio

AM-FM Radio

Playing the Radio

While on the audio main page the available sources are: AM, FM, DAB, CD, My Media, USB, SD, Bluetooth, and AUX Input.

- Press the RADIO screen button to scroll through AM, FM, or DAB.
- Press the MEDIA screen button to scroll through CD (if equipped), My Media, USB, SD, Bluetooth, and Aux Input.

Infotainment System Settings

Press the RADIO screen button to access broadcast sources.

Press the MENU screen button to display the following menus:

Tone Settings:

- Bass, Midrange, Treble, Surround (if equipped): Press + or - to adjust. Surround adjusts the headrest speaker volume only.
- Balance: Press

 or

 for more sound from the left or right speakers. The middle position balances the sound between the left and right speakers.
- Fade: Press ∧ or V for more sound from the front or rear speakers. The middle position balances the sound between the front and rear speakers.

Tag Song: Press to bookmark a song on an Apple device for later purchase using iTunes[®].

Time Shift: Timeshift is the recording of a radio station for up to 25 minutes. See "Timeshifting" later in this section.

DSP Modes:

- If equipped with Bose Studio Surround[®] sound system, it will have four DSP modes including:
 - Normal: Adjusts the audio to provide the best sound for all seating positions.
 - Driver: Adjusts the audio to provide the best sound for the driver.
 - Rear: Adjusts the audio to provide the best sound for the rear seat occupants.
 - Centerpoint: Creates the best surround sound for the whole vehicle.


Auto Volume: If equipped, this feature adjusts the volume based on vehicle speed. The options are OFF, Low, Medium - Low, Medium, Medium - High, or High. Press (Back to go back to the previous menu.

Bose AudioPilot Noise Compensation Technology:

If equipped, this feature adjusts the volume based on the noise in the vehicle. When turned on, AudioPilot detects noise and vehicle speed to continuously adjust the audio signal so that music will sound the same at a set volume level. This feature is most effective at lower radio volume settings where background noise can affect how well the music is being played. See www.bose.com/ audiopilot. This feature can be turned on or off. Press (Back to go back to the previous menu.

Update Station List: For AM, FM, and DAB only, press to update the station list. Press **(** Back to go back to the previous menu.

Finding a Station Seeking a Station

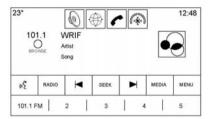

Press

or

to search for the previous or next strongest station.

Tuning a Station

Press the SEEK screen button to switch to TUNE. Press again to change back. Press

or

to manually search for a station.

Storing Radio Station Presets

Favourites are stored in the area at the bottom of the screen.

Up to 60 preset stations can be stored under the following:

AM, FM, DAB Stations: Press and hold a favourite button to save the current station as a favourite. Press a favourite button to recall a favourite station.

Mixed-Audio Favourites

Favourites that can be stored include radio stations, applications, contacts, tone settings, artists, songs, albums, podcasts, etc

To scroll through the favourites:

- Drag up along the top of the favourites. To close the favourites, drag them down.
- Slide a finger to the right or left to scroll through each page of favourites. A indicates which page is being viewed.

Tone Settings: Press and hold a screen button to save the current tone settings as a favourite. Press a screen button in the favourite area to recall a favourite tone setting.

The number of favourites displayed is automatically adjusted by default, but can be manually adjusted in the Settings menu under Radio and then Manage Favourites.

Radio Data System (RDS)

The audio system has a Radio Data System (RDS). RDS features are available for use only on FM and DAB stations that broadcast RDS information. With RDS, the radio can:

- Seek to stations broadcasting the selected type of programming
- Receive announcements concerning local and national emergencies
- Display messages from radio stations

This system relies on receiving specific information from these stations and only works when the information is available. In rare cases, a radio station may broadcast incorrect information that causes the radio features to work improperly. If this happens, contact the radio station.

The RDS system is always on. When information is broadcast from the current FM station, the station name or call letters display on the audio screen. RDS may provide a program type (PTY) for current programming and the name of the program being broadcast.

When RDS signal information has been detected, the metadata fields will be updated on the screen display to show the RDS data. The radio text will be updated any time new information is received.

The RDS fields on the screen will show in the order of:

- Frequency and /or RDS-PSN.
- RDS text line one is the information provided by the broadcast.
- RDS text line two and three is RDS text. Line three is used only if necessary, to wrap over from the text on line two.

If the RDS text information overflows from line two and three, the previous information given on line two and three will clear. The overflow of information will finish starting from the previously used line two and then if necessary, line three.

If an RDS text update occurs during the paging, the display fields are cleared and the new information is displayed, beginning on line two. Once the entire broadcast text is finished paging, the amount of text that can fit in lines two and three will be displayed and an ellipsis will indicate further text exists.

RDS Traffic Volume Setting

Traffic alert volume can be adjusted by turning the volume up or down while the alert is playing. The system will store this setting for future traffic alerts.

If the current source is playing at a higher volume than the traffic alert volume setting, the traffic alert will play back at the current source volume setting. If the current source is playing at a lower volume than the traffic alert volume setting, the traffic alert will play at the volume set for traffic.

Once an alert is complete, the system volume returns to its previously set level prior to the traffic alert.

If the traffic alert volume is set to zero during an alert, the next traffic alert will play at the minimum connection volume level.


If stations or sources are switched during a traffic alert, the current traffic alert will be cancelled.

If the RDS On/Off option is set to Off, and the Traffic Program (TP) is set to On, a traffic alert will automatically override the Off setting and place the RDS mode to On.

The default station list is sorted by RDS stations first, in order of signal strength, and followed by non-RDS stations grouped at the end of the list.

Stations that support traffic programming are marked TP and show on the right side of the line item.

Timeshifting (If Equipped)

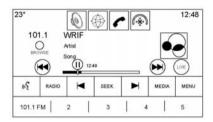

The audio system can record live radio for up to 30 minutes. When tuned to a station, the system automatically begins recording the audio along with the associated metadata. Timeshift must be turned on in the menu before recording can take place.

Press II to pause playback of the audio and to initiate timeshift mode. Press ► to resume playback of the live audio.

When timeshifting begins, a time is indicated on the right of the play/ pause indicator. This time initially indicates the time of day at which

playback is paused. This time continues to show as long as the system is in a paused mode and the buffer continues to fill.

Buffer Reset

The buffer will reset anytime the broadcast band or stations/channels are changed. Changing to a media source while in pause mode will not reset the buffer.

Rewinding or Fast Forwarding a Timeshifted Broadcast

- Press and hold the

 indicator
 to reverse playback at a rate of
 15 times the rate of normal
 playback.
- Press and hold the indicator to advance playback at a rate of 15 times the rate of normal playback. The timeshift buffer can be advanced up to the end of the timeshift buffer and return to live mode.

Returning to Live Broadcast

If listening to timeshifted radio, press the LIVE button to return to live radio.

Timeshifting and Station/Channel Lists

If browsing a station/channel list is started while listening to the timeshift content, the list content is shown in live time, not buffered time.

Skipping Back in a Broadcast

For programs with metadata, pressing the previous button less than five seconds into a program will make the system skip to the beginning of the previous program. If more than five seconds into the current song/program, the system starts at the beginning of the current program. If no metadata is available, the system skips back 30 seconds.

Reaching the End of Buffer

If the audio is paused and the 30 minute buffer is reached, the buffer continues recording the latest content and will erase the oldest content. When playback is started, the content played will be the last 30 minutes in the buffer.

Radio Reception

Unplug electronic devices from the accessory power outlets if there is interference or static in the radio.

FΜ

FM signals only reach about 16 to 65 km (10 to 40 mi). Although the radio has a built-in electronic circuit that automatically works to reduce interference, some static can occur, especially around tall buildings or hills, causing the sound to fade in and out

AM

The range for most AM stations is greater than for FM, especially at night. The longer range can cause station frequencies to interfere with each other. Static can also occur when things like storms and power lines interfere with radio reception. When this happens, try reducing the treble on the radio.

Mobile Phone Usage

Mobile phone usage, such as making or receiving phone calls, charging, or just having the phone on may cause static interference in the radio. Unplug the phone or turn it off if this happens.

Backglass Aerial

The AM-FM aerial is integrated with the rear window demister in the rear window. Do not scratch the inside surface or damage the lines in the glass. If the inside surface is damaged, it could interfere with radio reception. For proper radio reception, the aerial connector needs to be properly attached to the post on the glass.

If attaching a mobile phone aerial to the glass, attach it between the grid lines.

↑ Caution

Using a razor blade or sharp object to clear the inside rear window can damage the rear window aerial and/or the rear window defogger. Repairs would not be covered by the vehicle warranty. Do not clear the inside rear window with sharp objects.

⚠ Caution

Do not apply aftermarket glass tinting with metallic film. The metallic film in some tinting materials will interfere with or distort the incoming radio reception. Any damage caused to the backglass aerial due to metallic tinting materials will not be covered by the vehicle warranty.

Multi-Band Antenna

The roof aerial is for the GPS (Global Positioning System). Keep clear of obstructions for clear reception. If the vehicle has a sunroof, and it is open, reception can also be affected.

Audio Players

CD Player

The player can be used for CD and MP3 audio.

The system is capable of playing:

- Most audio CDs
- CD-R
- CD-RW
- MP3 or unprotected WMA formats

When playing any compatible recordable disc, the sound quality can be reduced due to disc quality, the method of recording, the quality of the music that has been recorded, or the way the disc has been handled.

There can be increased skipping, difficulty in finding tracks, and/or difficulty in loading and ejecting. If these problems occur, check the disc for damage or try a known good disc.

To avoid damage to the CD player:

- Do not use scratched or damaged discs.
- Do not apply labels to discs. The labels could get caught in the player.
- Insert only one disc at a time.
- Keep the loading slot free of foreign materials, liquids, and debris.
- Use a marking pen to label the top of the disc.


Loading and Ejecting Discs

To load a disc:

- 1. Turn the vehicle on.
- Insert a disc into the slot, label side up. The player pulls it in the rest of the way. If the disc is damaged or improperly loaded, there is an error and the disc ejects.

Press to eject a disc from the CD player. If the disc is not removed within a short period of time, it is automatically pulled back into the player.

Playing an Audio MP3 or CD

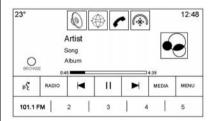

Press the MEDIA screen button until CD Audio icon Now Playing view is selected.

On the CD main page, a track number displays at the beginning of each track. Song, Artist, and Album information displays when available. Use the following controls to play the disc:

◄ (Previous/Fast Reverse):

- Press to seek to the beginning of the current or previous track.
 If the track has been playing for less than five seconds, it seeks to the previous track. If longer than five seconds, the current track starts from the beginning.
- Press and hold to fast reverse through a track. Release the button to return to playing speed. Elapsed time displays.

(Next/Fast Forward):

- Press to seek to the next track.
- Press and hold to fast forward through a track. Release the button to return to playing speed. Elapsed time displays.

When a Blu-ray or DVD disc, if equipped, is loaded and the CD button is pressed, a message displays, Go to video application to play DVD/BD.

Error Messages

If Disc Error displays and/or the disc comes out, it could be for one of the following reasons:

- The disc has an invalid or unknown format.
- The road is very rough. Try the disc again when the road is smoother.
- The disc is dirty, scratched, wet, or upside down.
- The air is very humid. Try the disc again later.
- There was a problem while burning the disc.
- The label is caught in the CD player.

If Disc Player Error displays, it could be for one of the following reasons:

- The player temperature is too high.
- There are load or eject errors.

If the CD is not playing correctly, for any other reason, try a known good CD.

If any error continues, contact your dealer.

CD Menu

Press the MENU button while that source is active to access the menu.

Press any of the following buttons on the MP3 Menu:

Shuffle: Press to play the tracks randomly. Press again to stop shuffle.

Auto Volume: If equipped, this feature adjusts the volume based on the speed of the vehicle. See *AM-FM Radio on page 10*.

Tone Settings: Press + or – to adjust Bass, Midrange, Treble, or Surround. See *AM-FM Radio on page 10*.

MP3 Guidelines

- Sampling rate: 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, and 48 kHz.
- Bit rates supported: 8, 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128, 144, 160, 192, 224, 256, and 320 kbps.
- Recorded on a CD-R or CD-RW.

MP3 Folder Information

Press anywhere between the top applications tray or the bottom menu to display the browse screen.

Root Directory: To access, press the screen anywhere in the central area of the screen. The root directory is treated as a folder. All files contained directly under the root directory are accessed prior to any root directory folders.

No Folder: When the CD only contains compressed audio files without any folders or playlists, all files are under the root folder.

File System and Naming: The song titles, artists, albums, and genres are taken from the file's ID3 tag and are only displayed if present in the tag. If a song title is not present in the ID3 tag, the radio displays the file name as the track name

USB Port

Audio from videos stored on SD/ USB cards may be listened to while the vehicle is in a forward gear. Videos can be watched while the vehicle is in P (Park). Use play/ pause or next/previous to control the video or touch in the browse to display a list of the current video filters.

This vehicle may have two SD ports and three USB ports. One SD port and one USB port in the centre console, one USB port in the storage behind the climate control system, and if equipped with Rear

Seat Entertainment (RSE), one SD port and one USB port in the rear media console storage area.

Playing from a USB

A USB mass storage device can be connected to the USB port.

Audio extensions supported by the USB are:

- MP3
- WMA
- AAC
- OGG
- AIFF
- 3GPP

Gracenote®

When plugging in a USB device, Gracenote service builds voice tags for music. Voice tags allow artists, albums with hard to pronounce names, and nicknames to be used to play music through voice recognition.

While indexing, infotainment features are available.

My Media Library

The infotainment system allows access to content from all of the connected devices. Press the MEDIA screen button to scroll through the options until My Media is selected. Press anywhere in the central area of the screen to browse the content.

USB MP3 Player and USB Drives

The USB MP3 players and USB drives connected must comply with the USB Mass Storage Class specification (USB MSC).

To play a USB device:

- 1. Connect the USB.
- Press MEDIA until the connected device is shown.

Use the following when playing an active USB source:

▶ (Play): Press to play the current media source.

II (Pause): Press to pause play of the current media source.

◄ (Previous/Reverse):

- Press to seek to the beginning of the current or previous track.
 If the track has been playing for less than five seconds, the previous track plays. If playing longer than five seconds, the current track restarts.
- Press and hold to reverse quickly through playback.
 Release to return to playing speed. Elapsed time displays.

► (Next/Fast Forward):

- · Press to seek to the next track.
- Press and hold to advance quickly through playback.
 Release to return to playing speed. Elapsed time displays.

USB Menu

Press Menu to display the USB menu. The following may be available:

Shuffle: Press to play the tracks randomly. Press again to stop shuffle.

Bose AudioPilot: If equipped, press to turn Bose AudioPilot on or off. AudioPilot is an On/Off selection on the list entry from the Main menu. See AM-FM Radio on page 10.

Tone Settings: Press + or – to adjust Bass, Midrange, Treble, or Surround. See *AM-FM Radio on page 10*.

USB Browse Menu

Press the browse screen button to view the browse menu and the following options are displayed along the bottom of the screen:

Playlists:

Supported Playlist extensions are: m3u, pls, wpl, asx, b4s, and xspf.

- 1. Press to view the playlists stored on the USB.
- 2. Select a playlist to view the list of all songs in that playlist.
- 3. Select a song from the list to begin playback.

Artists:

- 1. Press to view the list of artists stored on the USB.
- 2. Select an artist name to view a list of all albums by the artist.
- To select a song, press All Songs or press an album and then select a song from the list.

Albums:

- 1. Press to view the albums on the USB.
- Select the album to view a list of all songs on the album.
- 3. Select a song from the list to begin playback.

Songs:

- 1. Press to display a list of all songs on the USB.
- 2. To begin playback, select a song from the list.

Genres:

- 1. Press to view the genres on the USB.
- 2. Select a genre to view a list of artists.
- 3. Select an artist to view albums by that artist.
- 4. Select an album to view songs on the album
- 5. Select a song to start playback.

Podcasts, Composers, Audio Books, Videos, and Folder View are shown when More is selected from the bottom of the screen.

Podcasts:

 Press to view the podcasts on the USB. 2. Select podcast to get a list of podcast episodes.

Composers:

- Press to view the composers on the USB.
- Select Composer to view a list of albums by that composer. Select an album or all songs to view a list of songs.
- 3. Select a song from the list to begin playback.

Audiobooks:

- Press to view the audiobooks stored on the iPod. Select an audiobook to get a list of chapters.
- 2. Select the audiobook from the list to begin playback.

Folder View:

- 1. Press to view the directories on the USB/SD card.
- 2. Select a folder to view a list of all files.

3. Select a file from the list to begin playback.

File System and Naming

File systems supported by the USB are:

- FAT32
- NTFS
- HFS+

The songs, artists, albums, and genres are taken from the file's song information and are only displayed if present. The radio displays the file name as the track name if the song information is not available.

Supported Apple® Devices

The following Apple devices are supported:

- iPod touch® (5th generation)
- iPod touch[®] (4th generation)
- iPod touch[®] (3rd generation)
- iPod touch[®] (2nd generation)
- iPod touch[®] (1st generation)

22 Infotainment System

- iPod nano[®] (7th generation)
- iPod nano[®] (6th generation)
- iPod nano[®] (5th generation)
- iPod nano[®] (4th generation)
- iPod nano[®] (3rd generation)
- iPod nano[®] (2nd generation)
- iPod nano[®] (1st generation)
- iPod classic[®]
- iPod[®] with video
- iPhone[®] 5
- iPhone® 4S
- iPhone[®] 4G
- iPhone® 3GS
- iPhone[®] 3G
- iPhone®
- iPad[®]

Loss of Audio

Do not pair the Bluetooth of an iPhone that is connected by USB. If an attempt to pair the Bluetooth of

the same connected phone is made, the system will automatically mute the iPod audio.

If there is a loss of audio, playback can be resumed by changing the audio flow from Bluetooth to USB cable.

To change the audio flow:

- While the iPhone is connected, double tap the phone's home button.
- Swipe a finger to the left on the phone's screen display. A box with a triangle on the lower line of the box that is highlighted displays. Press this box to display the dock connector option.
- Select "Dock Connector."

Other phones such as the Android phones may have a similar reaction.

Bluetooth Streaming Audio and Voice Recognition

See Bluetooth Audio on page 24 for information on using voice recognition with Bluetooth streaming audio.

Make sure all devices have the latest software downloaded.

Storing and Recalling Media Favourites

To store media favourites, press and hold an open favourite during media playback to display a list of media types. Select from this list.

The media types that may display are:

Genres: Press to store the current genre as a favourite. Press a screen button in the favourite area to recall a favourite genre. The first song of the genre begins to play.

Artists: Press to store the current artist as a favourite. Press a screen button in the favourite area to recall a favourite artist. The first song in the artist list begins to play.

Albums: Press to store the current album as a favourite. Press a screen button in the favourite area to recall a favourite album. The first song in the album list begins to play.

Playlists: Press to store the current playlist as a favourite. Press a screen button in the favourite area to recall a favourite playlist. The first song in the playlist begins to play.

Songs: Press to store the current song as a favourite. Press a screen button in the favourite area to recall a favourite song.

Podcasts or Podcast Episode:

Press and hold a screen button to store the current podcast as a favourite. Press a screen button in the favourite area to recall a favourite podcast or podcast episode. The podcast or podcast episode begins to play.

Audiobooks: Press and hold a screen button to save the current audiobook as a favourite. Press a screen button in the favourite area to recall a favourite audiobook; the first chapter in the audiobook begins to play.

Videos: Press and hold a screen button to store the current video as a favourite. Press a screen button in the favourite area to recall a favourite video; the first episode in the video begins to play.

SD Card Reader

This vehicle may have two SD ports, one in the centre console and one in the rear HVAC area, if equipped with Rear Seat Entertainment (RSE).

The SD port is for audio and video playback. Playback from an SD card follows the same file formats and restrictions defined under the USB section. See *USB Port on page 19*.

Set up the SD card while the vehicle is in P (Park). See "Audio" under *Infotainment on page 3*.

Place the card into the port.

If an SD card has already been connected, but a different source is currently active, press the MEDIA screen button to scroll through the audio source screens until SD card displays.

Auxiliary Jack

This vehicle has an auxiliary input jack in the centre console under the armrest and in the rear media console if equipped with Rear Seat Entertainment (RSE). Possible auxiliary audio sources include:

- Laptop computer
- Audio music player

This jack is not an audio output. Do not plug headphones into the auxiliary input jack. Set up an auxiliary device while the vehicle is in P (Park).

Connect a 3.5 mm (1/8 in) cable from the auxiliary device to the auxiliary input jack. When a device is connected, the system can play audio from the device over the vehicle speakers.

If an auxiliary device has already been connected, but a different source is currently active, press the MEDIA screen button to scroll through audio source screens, until AUX source screen displays.

Bluetooth Audio

If equipped, music may be played from a paired Bluetooth device. See Bluetooth (Overview) on page 76 or Bluetooth (Infotainment Controls) on page 77 or Bluetooth (Voice Recognition) on page 82 for help pairing a device.

The music can be controlled by either the infotainment controls, or the controls on the device.

Music can be launched by pressing the MEDIA screen button on the Home Page. To play music via Bluetooth:

- 1. Power on the device, and pair to connect the device.
- Once paired, go into the audio application from the Home Page or via the applications tray. Select MEDIA until Bluetooth displays.

Bluetooth Audio Menu

Press the MENU screen button to display the Bluetooth Audio menu. The following may be available:

Bose AudioPilot: If equipped, press to turn Bose AudioPilot on or off. AudioPilot is an On/Off selection on the list entry from the Main menu. See AM-FM Radio on page 10.

Tone Settings: Press + or – to adjust Bass, Midrange, Treble, or Surround. See *AM-FM Radio on page 10*.

Press \(\) Back to go back to the previous menu.

Manage Bluetooth Devices: Press to go to the Bluetooth page to add or delete devices or pair.

When selecting Bluetooth audio, the radio may not be able to launch the audio player on the connected device to start playing. When the vehicle is not moving, use the phone to begin playback.

All devices launch audio differently. When selecting Bluetooth audio as a source, the radio may show as paused on the screen. Press play on the device or press ▶ on screen to begin playback.

Some phones support sending Bluetooth music information to display on the radio. When the radio receives this information, it will check to see if any is available and display it. For more information about supported Bluetooth features, see www.gm.com/bluetooth.

Rear Seat Infotainment

Rear Seat Entertainment (RSE) System

The vehicle may have an RSE system. The RSE system includes a AM/FM, Blu-ray/DVD/CD player, USB, SD, audio/video jacks, wired headphone jack, wireless headphones, and a remote control.

Before Driving

The RSE can only be viewed on the front screen when the vehicle is in P (Park). The driver cannot safely view the video screen while driving.

In severe or extreme weather conditions, the RSE system may not work until the temperature is within the operating range of above -20°C (-4°F) and below 55°C (131°F).

System Operation

The video screens are on the back of the driver and front passenger seats.



To use:

- 1. Push the release button on the seat back console.
- 2. Move the screen to the viewing position.
- Open a screen to turn the system on. If the screens are open with the system off, press the power button on the remote

to turn the system on. The system can also be turned on from the front infotainment system by pressing the RSE icon on the Home Page.

Push the video screen down into its locked position when it is not in use. The screen turns off automatically.

The audio may continue with the screens down. This allows listening to music without the screen on.

Only the top of the left RSE seat back console has eight infrared transmitter lights for the wireless headphones throughout the vehicle. Both seatbacks have an infrared receiver for the remote control on the top of each console.

⚠ Caution

Avoid directly touching the video screen, as damage may occur.

Sources


Sources include AM, FM, DAB, BD, AUX, Photos, CD/DVD, USB, and SD cards.

Menus and Features

AM/FM Menu

Press the RADIO button on the remote, then select AM, FM, or DAB.

Access the AM or FM menu by pressing any menu button in any AM, FM, or DAB screen.

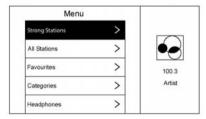

Use this menu to select Strong Stations, All Stations, Favourites, Categories, Headphones, Overhead Display (if equipped), DivX[®] VOD, or Software Information.

Disc Menu BD



Press the MEDIA button on the remote, then select CD/DVD/BD, USB, SD, or AUX.

Press the MENU button on the remote control from any BD screen to display the following menus.

Choose from POP UP MENU (BDMV Only), TOP MENU, COLOUR, KEYPAD, DISC CONTROL, and MORE (Prev still, Next still, Settings).

Close any menu by pressing the MENU button or ⇔ BACK button, or waiting for the 15-second time out.

Disc Menu DVD

Press the MENU button on the remote control from any DVD screen to display screen controls to select from Top Menu, Keypad, Next Still, Photo, and Settings.

Close this menu by pressing the Menu button or Back button, or waiting for the 15-second time out.

CD Menu



Press the MENU button on the remote control from any CD screen.

The CD Menu contains: Track List, Shuffle, Headphones, Brightness, Player Setup: Audio Compression, Auto Enter (for CD-DA only), Title Search (for CD-DA only), Disc Information (for CD-DA only), Overhead Display (if equipped), and Software Information. When a disc is ejected, only Brightness, Headphones, Overhead Display (if equipped), Player Setup, DivX VOD, and Software Information will be available.


Pop Up Menu (BD Only)

Select Pop UP MENU from the menu options to display the disc menu on top of the movie. Make a selection to exit the Pop-up menu. When the Pop-Up menu is opened, the overlay/Interaction Selector menu will be closed. The Pop-up menu is disc dependent and may or may not time out on its own.

Top Menu BD/DVD

Select this item to display the menu for the DVD or BD. Make a selection to exit the TOP MENU. TOP MENU is not available for BDAV, DVD-VR, and AVC-REC.


Colour (BD Only)

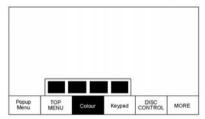

Select COLOUR to display the four colour button options: blue, yellow, red, and green. Highlight a colour option and press ENTER and the appropriate action will be carried out. Press the Back button or MENU button, or wait for the 15-second time out to close the menu. Press the down arrow on the yellow colour to keep the overlay menu up, but close the colour menu. The colour

menu is disc dependent; selecting colours for discs that do not support this feature will have no function.

Keypad BD/DVD

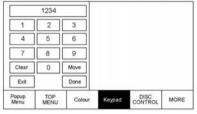


Press KEYPAD to display the single digit entry keypad. To close the keypad, press the PACK or MENU button, wait for the menu to time out, or press the down arrow from the exit, or Done buttons to keep the menu up but close the keypad. The keypad is disc dependent; selecting numbers for discs that do not support this feature will have no function.

The keypad input is limited to four digits. Any digits entered beyond four will be discarded.

Press the Clear button to clear one digit at a time. Press and hold the Clear button to clear all entered digits.

Disc Control (BDAV and BDMV Only)

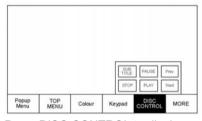

Press DISC CONTROL to display options for subtitles, play, pause, track forward, track previous, and stop the disc. Press the ♀ BACK button or MENU button, or wait for the time out to close the menu. Press the down arrow from Stop, Play, or Next to keep the overlay

menu up, but close the disc control menu. The disc control menu is disc dependent; selecting controls for discs that do not support this feature will have no function.

Stop Disc (DVD Only)

Press Stop to close the overlay menu and open the Disc Stopped screen. Press Menu on the screen to open the Disc Stopped menu. Select from Resume Playback, Top Menu, Title Search, Restart Disc, Browse Media, and Player Setup. Some of these options are not available while the disc is playing.

Resume Playback: Returns to the current position on the disc and resumes play.


Top Menu: Returns to the disc provided menu.

Title Search (BDMV, AVCHD, and DVD-V only): Provides a keypad.

Browse Media (BDAV, DVD-A, DVD-VR, AVCREC only): Allows the media on the disc to be searched in a list format.

Restart Disc: Allows the disc to restarted from the beginning.

More BD/DVD

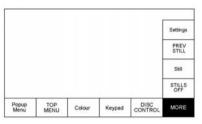

The MORE submenu includes both the SETTINGS item and items related to still pictures.


Prev Still/Next Still/Stills Off

This feature allows for turning still off, going to the previous still, or advancing to the next still picture. PREV STILL will go back to the previous picture. NEXT STILL will advance to the next picture in sequential order. STILLS OFF will return to the designated home still, if it is available. Press the ▷ BACK or MENU button, or wait for the

15-second time out to close the menu. Press the down arrow on the bottom option to close the next still pop-up, the menu will remain up. This feature is disc dependent.

This feature can also be accessed from the Photo button on the DVD Disc Menu depending on the disc.

Settings BD/DVD

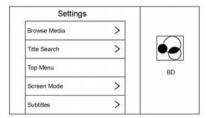

This allows access to Browse Media (BDAV, AVCREC, DVD-A, and DVD-VR only), Title Search (AVCHD, DVD-V, BDMV Only), Top Menu (not available in BDAV), Screen Mode, Subtitles, Angle (BDMV, DVD-V, DVD-A only), Restart Disc, Audio Tracks, Brightness, Player Setup, Audio

Channels, DivX VOD, Disc Information, Overhead Display (if equipped), Headphones, and Software Information.

Browse Media

Browse Media allows browsing by Video List or Playlist.

Title Search (AVCREC and DVD-V)

This allows the titles provided by the disc to be searched. Select this option to bring up a keypad to search for specific titles.

Top Menu BD/DVD

Select to display the menu for the DVD or BD.

Screen Mode Setting BD/DVD

Select Screen Mode Normal, Wide, or Zoom by highlighting Screen Mode and pressing enter or the right arrow. Use screen mode to adjust the framing on the RSE display. Screen Mode only applies to video sources and should be maintained if the disc is ejected.

Disc Subtitle BD/DVD

Select Subtitles from the Settings Menu by highlighting Subtitles and pressing Enter or the right arrow. Select a subtitle by highlighting this option and pressing enter or the right arrow. Selecting the subtitle will display the updated now playing screen.

Disc Angle BD/DVD

Select Disc Angle from the Settings Menu by pressing Enter or the right arrow. Select an angle by using the up and down arrows to highlight the option and pressing Enter or the right arrow.

Restart Disc BD/DV

Select Restart Disc to restart the disc from the beginning.

Disc Audio Tracks BD/DVD


Select Audio Tracks from the Settings Menu by highlighting Audio Tracks and pressing Enter or the right arrow, if this feature is supported by the audio disc.

Brightness Settings

Select Brightness from the Settings Menu by highlighting Brightness and pressing the Enter button or the right arrow.

Increase the brightness by using the up or right arrow and decrease the brightness by using the down or left arrow.

Player Setup BD/DVD

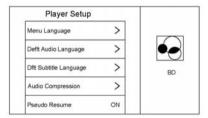

Player Setup may include the following options:

- Default Menu Language
- Default Audio Language
- Default Subtitle Language
- Audio Compression

- · Pseudo Resume
- Auto Enter
- Audio Channel is in the Setting menu. Audio channel is available in AVCREC, BDAV, and DVD-VR..
- Format Internal User Memory: Only shown when no disc is inserted

Default Menu Language

When no disc is inserted, select from a list of languages or enter a language code.

Default Audio Language

When no disc is inserted, select from a list of languages or enter a language code.

Default Subtitle Language

When no disc is inserted, select from a list of languages or enter a language code.

Audio Compression

When on, the RSE will attempt to reduce the difference between the audio highs and lows.

Enter Language Code

Enter the desired language code.

Language/code		User Code
Japanese	JPN	7465
English	ENG	6978
French	FRA	7082
German	DEU	6869
Italian	ITA	7384
Spanish	SPA	6983
Dutch	NLD	7876
Russian	RUS	8285
Chinese	ZHO	9072
Korean	KOR	7579
Greek	ELL	6976
Afar	AAR	6565

Abkhazian	ABK	6566
Afrikaans	AFR	6570
Amharic	AMH	6577
Arabic	ARA	6582
Assamase	ASM	6583
Aymara	AYM	6589
Azerbaijani	AZE	6590
Bashkir	BAK	6665
Byelorussian	BEL	6669
Bulgarian	BUL	6671
Bihari	BIH	6672
Bislama	BIS	6673
Bengali	BEN	6678
Tibetan	BOD	6679
Breton	BRE	6682
Catalan	CAT	6765
Corsican	cos	6779
Czech	CES	6783
Welsh	CYM	6789

Danish	DAN	6865
Bhutani	DZO	6890
Esperanto	EPO	6979
Estonian	EST	6984
Basque	EUS	6985
Persian	FAS	7065
Finnish	FIN	7073
Fiji	FIJ	7074
Faroese	FAO	7079
Friesian	FRY	7089
Irish	GLE	7165
Scots-Gaelic	GLA	7168
Galician	GLG	7176
Guarani	GRN	7178
Gujarati	GUJ	7185
Hausa	HAU	7265
Hindi	HIN	7273
Croatian	HRV	7282
Hungarian	HUN	7285

Armenian	HYE	7289
Interlingua	INA	7365
Interlingue	ILE	7369
Inupiak	IPK	7375
Indonesian	IND	7368
Icelandic	ISL	7383
Hebrew	HEB	7269
Yiddish	YID	8973
Javanese	JAV	7487
Georgian	KAT	7565
Kazakh	KAZ	7575
Greenlandic	KAL	7576
Cambodian	KHM	7577
Kannada	KAN	7578
Kashmiri	KAS	7583
Kurdish	KUR	7585
Kirghiz	KIR	7589
Latin	LAT	7665
Lingala	LIN	7678
Lingala	LIN	7678

Laotian	LAO	7679
Lithuanian	LIT	7684
Latvian	LAV	7686
Malagasy	MLG	7771
Maori	MRI	7773
Macedonian	MKD	7775
Malayalam	MAL	7776
Mongolian	MON	7778
Moldavian	MOL	7779
Marathi	MAR	7782
Malay	MSA	7783
Maltese	MLT	7784
Burmese	MYA	7789
Nauru	NAU	7865
Nepali	NEP	7869
Norwegian	NOR	7879
Occitan	OCI	7967
Oromo	ORM	7977
Oriya	ORI	7982

Panjabi	PAN	8065
Polish	POL	8076
Pashto, Pushto	PUS	8083
Portuguese	POR	8084
Quechua	QUE	8185
Rhaeto-Romance	ROH	8277
Kirundi	RUN	8278
Romanian	RON	8279
Kinyarwanda	KIN	8287
SanSkrit	SAN	8365
Sindhi	SND	8368
Sangho	SAG	8371
Serbo-Croatian	SCR	8372
Singhalese	SIN	8373
Slovak	SLK	8375
Uzbek	UZB	8590
Vietnamese	VIE	8673
Volapuk	VOL	8679
Wolof	WOL	8779

Xhosa	XHO	8872
Yoruba	YOR	8979
Zulu	ZUL	9085
Slovenian	SLV	8376
Samoan	SMO	8377
Shona	SNA	8378
Somali	SOM	8379
Albanian	SQI	8381
Serbian	SRP	8382
Siswaiti	SSW	8383
Sesotho	SOT	8384
Sundanese	SUN	8385
Swedish	SWE	8386
Swahili	SWA	8387
Tamil	TAM	8465
Telugu	TEL	8469
Tajik	TGK	8471
Thai	THA	8472
Tigrinya	TIR	8473

Turkmen	TUK	8475
Tagalog	TGL	8476
Setswana	TSN	8478
Tonga	TON	8479
Turkish	TUR	8482
Tsonga	TSO	8483
Tatar	TAT	8484
Twi	TWI	8487
Ukrainian	UKR	8575
Urdu	URD	8582

Pseudo Resume

When on, the RSE will attempt to resume play of the video where it left off when re-entering the vehicle. This feature can be turned on or off.

Auto Enter

When on, the RSE will attempt to start play of the video when the disc is inserted. This feature can be turned on or off.

Not all discs support this feature.

Format Internal User Memory

To format internal user memory, select Format Internal User Memory from the Player Setup, then select OK. A message displays and the activity indicator displays. A message displays when the format is complete.

Errors

Errors can occur if the local storage area has been broken or if the ignition is turned off during formatting. If the screen is closed during formatting, this will not interrupt the formatting. If the screen is opened again, the current state of format will be displayed. If an error occurs, the Error screen will display when the ignition is turned on.

Wired Headphones

To select the headphone audio for the wired headphone jack based on screen 1 or screen 2, press Enter or the right arrow on the headphones. Press the Back button to exit the menu. The headphones are linked to screen 1 by default.

Player Setup (CD-DA Only)

This allows access to the Audio Compression and Auto Enter.

Title Search (CD-DA Only)

This displays a keypad.

Disc Information (CD-DA Only)

If the inserted disc is a BDMV, BDAV, AVCHD, AVCREC, DVD-Video, or DVD-VR, the disc title should display. If the inserted disc is DVD-Audio, DTS-CD, CDDA, or Mixed-CD, the track number will display.

DivX®

This indicates the vehicle is registered to play DivX media and how to obtain more information.

Overhead Display

On vehicles with a third overhead display option, this allows the overhead display to always show what is on screen 1 or 2.

Software Information

This allows access to Version information, Save Vehicle Info to USB, and View Open Source.

Save Vehicle Info to USB allows the current version to be saved to a jump drive, which must be done before an update can be performed.

View Open Source indicates where software information can be found.

RSE Controls Available from the Front Screen

To access the RSE application, select Video from the HOME screen. The Video app may also be selected from the applications tray if it has been stored in one of the five locations.

Sourcing to DVD/BD

After a disc is inserted, it will automatically begin playing on both rear screens. If no video disc is inserted or if the disc is ejected while it is sourced to DVD/BD, the screen will display "No Video Disc Inserted."

With the vehicle in P (Park), BD/ DVD can be watched on the front screen. The following icons will appear along the bottom of the front screen when a DVD, VCD, USB, SD, or AUX is inserted:



The following appears when a BD is sourced:



Rear Media

REAR MEDIA will allow transitioning between AUX, Disc, USB, and SD sources for the rear screens. Sources selected using the REAR MEDIA button will automatically be sourced for both rear screens and begin playback from the first available file.

The video will only appear on the front screen with the vehicle in P (Park). When the vehicle is in any other gear, the front screen displays the active media source.

DVD/BD Disc Menu

With the vehicle in P (Park), press to access the DVD/BD disc menu. Make a selection to exit the disc menu.

Next Track/Previous Track

Use ▶ to skip ahead, or ▼ to skip back between chapters. Press ▼ less than five seconds into the current track to start at the beginning of the previous track. Press ▼ more than five seconds into the current track to start at the beginning of the current track.

Fast Forward/Fast Rewind

With the vehicle in P (Park), hold or or or approximately one and one-half seconds to fast forward or fast rewind at a rate of eight times normal playback speed. If or or or or fast rewind will increase.

Play/Pause

Press ▶ to play or **II** to pause, depending on the current selection.

Keypad for DVD/VCD/SD/USB

With the vehicle in P (Park), press to display the DVD keypad. DVD keypad functionality is disc dependent and may not be available on all DVDs. Up to four digits can be entered. Press Clear to remove one digit in the entry field. Press and hold Clear to remove all digits in the entry field.

Pop Up Menu (BD Only)

This displays the pop up menu contents for the BD. Make a selection to exit the pop up menu view.

Cursor

The cursor is used to navigate and select items in the disc menu. Press the up, down, right, or left arrows, or the ENTER button. The cursor will time out and close.

Sourcing USB/SD/VCD/AUX with Video

With the vehicle in P (Park), video can be watched on the front screen from devices plugged into the rear pod. The following icons will be available:



These features will function the same as in DVD/BD sources, with the following exceptions:

- KEYPAD is only available for VCD in P (Park).
- DISC MENU is only available for disc sources such as VCD. The system displays the menu provided by the disc.

Sourcing DVD/BD/USB/SD/VCD

With the vehicle in D (Drive), the following icons display along the bottom of the front screen when one of these sources is active:



DVD/BD/USB/SD/VCD: All five buttons are available.

AUX: Only REAR MEDIA and MENU are available.

Rear Media

Use REAR MEDIA to select AUX, Disc, USB, or SD sources for the Rear Seat Entertainment (RSE). When using the REAR MEDIA button to select a source, both rear screens will be sourced and begin playback of the first available file. The video will only display on the front screen if the vehicle is in

P (Park). When the vehicle is in any other gear, the front screen displays the active media source.

Previous Track/Next Track

Press

or

to select the previous or next track on the current media.

Play/Pause

Press ▶ to play or II to pause, depending on the current selection. A time bar displays when the pause button is pressed.

Menu (DVD/BD/SD/USB/AUX/VCD)

MENU is only available in D (Drive). Press the MENU button to display these menu options:

- Tone Settings
- Auto Volume Control
- · Traffic Announcements

Tone Settings (DVD/BD)

Tone settings for bass, mid, and treble are available in any source mode. Once set, tone settings are set for all sources.

Auto Volume Control (DVD/BD)

Automatic volume control (AVC) adjusts the volume of the audio based on the speed or ambient noise of the vehicle. Some vehicles may be equipped with the Bose AudioPilot system. In these cases, the Auto Volume main menu item is replaced with the Bose AudioPilot menu item. AVC or Bose AudioPilot is available to use with any source mode.

Traffic Program Alerts (DVD/BD)

Traffic alerts will display in the RSE system. The video will continue to play and the audio will mute, depending on the alert.


Closing the Menu (DVD/BD)

Press the Back or Exit button to close a menu. This will return to the RSE application on the previously viewed screen.

Power

Press the power button on the screen to turn the rear RSE screens on or off. The front screen will continue to operate when the rear screens are turned off. The rear screens can be turned back on by pressing the power button again or from the rear seat by using the remote. Select SCREEN 1 or 2 and press the power button.

Headphones

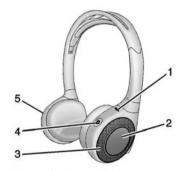

- 1. Power indicator light
- 2. Channel 1 or 2 switch
- Volume control
- 4. Power button
- 5. Battery cover

RSE includes two 2-channel wireless headphones. The headphones are used to listen to various multimedia. The wireless headphones have a power button, Channel 1 or 2 switch, and a volume control.

Press the power button to turn on the headphones. A light on the headphones comes on. If the light does not come on, check the batteries. Intermittent sound or static can also indicate weak batteries. See "Battery Replacement" later in this section.

Turn the headphones off when not in use.

Press the centre of the right side of the headphone to change the channel. Channel 1 will provide audio associated with screen 1 and channel 2 will provide audio associated with screen 2.

- Screen 1 is behind the driver/left seatback.
- Screen 2 is behind the passenger/right seatback.

Infrared transmitters are on the top of the left seatback video screen. The headphones shut off automatically to save the battery power if the RSE system is off or if the headphones are out of range of

the transmitters for more than three minutes. Moving too far forward or stepping out of the vehicle can cause the headphones to lose the signal or have static.

Use the volume control on the headphones to adjust the volume.

For best audio performance, wear the headphones as indicated with L (Left) and R (Right) on the ear pads. Do not let anything cover the ear pads.

⚠ Caution

Do not store the headphones in heat or direct sunlight. This could damage the headphones and repairs will not be covered by the warranty. Storage in extreme cold can weaken the batteries. Keep the headphones stored in a cool, dry place.

If the foam ear pads become worn or damaged, the pads can be replaced separately. To purchase replacement ear pads, call 1-888-293-3332 or contact your dealer.

Battery Replacement

To change the batteries:

- Loosen the screw to the battery door on the left side of the headphones.
- 2. Slide the battery door open.
- 3. Replace the two AAA batteries.
- 4. Replace the battery door and tighten the screw.

Remove the batteries if the headphones will not be used for a long time.

Auxiliary Inputs Audio/Video (A/V) Jacks



- 1. SD card reader
- 2. USB port
- 3. A/V jacks
- 4. Wired headphone jack
- 5. Volume control

If equipped with RSE, an SD card reader (1), USB port (2), A/V jacks (3), wired headphone jack (4),

and volume control (5) will be inside the rear storage area of the centre console.

The A/V jacks allow audio or video cables to be connected from an auxiliary device such as a camcorder or video game system.

The A/V jacks are colour coded:

- Yellow for video input
- · White for left audio input
- Red for right audio input

Power for the auxiliary devices is not supplied by the infotainment system.

To use the auxiliary inputs of the RSE system:

- Connect the auxiliary device cables to the A/V jacks.
- Power on both the auxiliary device and the RSE video screen.

USB/SD

This allows for video and audio playback of supported media.

To use the USB and SD:

- Insert the device in the appropriate slot.
- 2. Select the source via the rear screen menu with the remote control MEDIA button.
- Select the source via the front by pressing on the "Video" application on the home screen.

Audio Output

Audio from a Blu-ray/DVD/CD player or auxiliary inputs can be heard through:

- · Wireless headphones.
- · Vehicle speakers.
- Vehicle wired headphone jack.


The RSE system transmits the audio signal to the wireless headphones if an audio signal is available. See "Headphones" earlier in this section.

Wired Headphone Jack

Audio from the wired headphone jack can be heard from the desired source through the MENU button on the remote and by selecting Settings, then Headphone. The headphone audio is selected based on the audio associated with screen 1 or screen 2.

The front seat passengers are able to listen to playback from the A/V jacks through the vehicle speakers by selecting Rear A/V as the source on the radio.

Remote Control

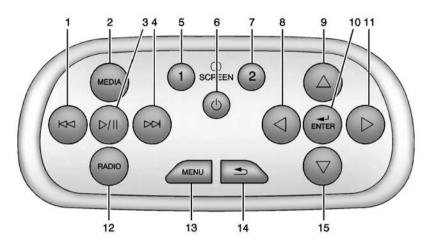

Remote Control Buttons

- 1. ⋈ (Previous/Reverse)
 - Radio: Press to seek the previous radio station.
 - CD: Press to seek the previous track.

- Blu-ray/DVD: Press to seek the previous chapter.
- Press and hold for fast reverse.

2. MEDIA

 Press to scroll through the menus including: CD, AUX, Blu-ray/DVD, SD, USB.

3. ►/II (Play/Pause)

 Press to start playing.
 Press to pause. Press again to continue playing.

4. ⋈ (Next/Fast Forward)

- Radio: Press to seek the next radio station.
- CD: Press to seek the next track.
- Blu-ray/DVD: Press to seek the next chapter.
- Press and hold to fast forward.

5. SCREEN 1

 Press to select the left screen. Once pressed, all remote control commands will only pertain to screen 1.

6. **じ** (Power)

 Press to turn the video screens on and off.

7. SCREEN 2

- Press to select the right screen. Once pressed, all remote control commands will only pertain to screen 2.
- 8. < (Previous/Reverse/Decrease)
 - Radio and CD: Press to go to the previous station or track.
 - Press to go to the previous menu.
 - Press to decrease the brightness of the RSE screen.
- 9. \triangle (Up Arrow)
 - Press to scroll up a list.

10. ◀ / ENTER

 Press to select the highlighted choice in any menu.

- Press and hold for quick play.
- 11. (Next/Forward/Increase)
 - Radio and CD: Press to go to the next station or track.
 - Press to go to the next menu.
 - Press to increase the brightness of the RSE screen.

12. RADIO

 Press to scroll through the radio sources including AM, FM, or DAB.

13. MENU

- Press to go to the menu of the now playing screen.
- 14. **(Back)**
 - Press to go back to the previous menu.
 - Press and hold to go back to the now playing screen.

- 15. ∇ (Down Arrow)
 - Press to go down a list.

To use the remote control, aim it at the transmitter window at either seatback console and press the buttons firmly. Direct sunlight or very bright light could affect the ability of the RSE transmitter to receive signals from the remote control. Check the batteries if the remote control does not seem to be working. See "Battery Replacement" later in this section. Objects blocking the line of sight could also affect the function of the remote control.

⚠ Caution

Storing the remote control in a hot area or in direct sunlight can damage it, and the repairs will not be covered by the warranty.

Storage in extreme cold can

(Continued)

Caution (Continued)

weaken the batteries. Keep the remote control stored in a cool, dry place.

Battery Replacement

To change the remote control batteries:

- Insert a coin or key to pull up the rear cover on the remote control.
- 2. Replace the two AAA batteries in the compartment.
- 3. Replace the battery cover.

Remove the batteries from the remote control if it will not be used for an extended period of time.

RSE Troubleshooting

No power: The ignition might not be in ON/RUN or ACC/ACCESSORY.

The picture does not fill the screen. There are black borders on the top and bottom or on both

sides or it looks stretched out: Press the menu button on the remote control to change the display mode setting.

In auxiliary mode, the picture moves or scrolls: Check the auxiliary input connections at both devices.

The remote control does not work: Check to make sure the remote control is programmed to the correct screen. Make sure there is no obstruction between the remote control and the transmitter window and check the batteries to make sure they are not dead or installed incorrectly.

There is no sound from the headphones with the indicator light on: If the batteries are good, make sure the headphones are programmed to the correct screen and on the correct channel for the screen being viewed.

The auxiliary source is running but there is no picture or sound: Check that the RSE video screen is

in the auxiliary source mode by pressing the MEDIA button on the remote control. Check the auxiliary input connections at both devices.

Sometimes the wireless headphone audio cuts out or buzzes: Check for obstructions, low batteries, reception range, and interference from mobile phone towers or from mobile telephone use in the vehicle. Check that the headphones are on correctly using the L (Left) and R (Right) on the headphones. Check that the headphones are positioned properly with the headband across the top of the head.

I lost the remote and/or the headphones: See your dealer for assistance.

The Blu-ray/DVD is playing, but there is no picture or sound: Check that the RSE video screen is sourced to the Blu-ray/DVD player by pressing the MEDIA button on the remote control.

Video Display Error Messages

The video screen may display one of the following:

Disc Error: There are disc load or eject problems, the disc is inserted with the disc label wrong side up, the disc is damaged, or the disc is not from the correct region.

No Disc Inserted: No disc is present.

Disc Player Error: The temperature is outside the operating range of the RSE system. If the temperature is within range, see your dealer.


Video Distortion

Video distortion can occur when operating mobile phones, scanners, CB radios, Global Positioning Systems (GPSs), two-way radios, mobile faxes, or walkie talkies.

It might be necessary to turn off the video player when operating one of these devices in or near the vehicle.

Navigation

Using the Navigation System

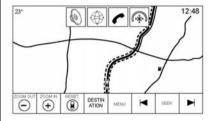


Press the NAV button on the Home Page or the NAV icon in the applications tray to access the navigation application.

Press MENU from the map view to access the Navigation Menu. Features displayed in the Navigation Menu can be selected to adjust navigation preferences.

To exit out of a list, press the EXIT screen button in the top right corner of the map to return to the main map view.

It is advised to set up preferences before setting a destination. To set a destination, see *Destination on page 52*.

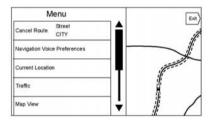

Additional navigation features are:

- Cancel/Resume Route
- Navigation Voice Preferences
- Current Location
- Traffic
- Map View
- Routing Preferences

44 Infotainment System


- Display "Places of Interest" Icons
- Personal Data

Cancel/Resume Route

- While under route guidance, this screen button displays Cancel Route. Press Cancel Route to cancel route guidance. No further prompts will be given. The list item then changes to Resume Route.
- Press the Resume Route screen button to resume route guidance to the last entered destination.
- The last location that the system has provided guidance to can be resumed by pressing on this list item.
- If the route includes waypoints, the entire route can be suspended using the Cancel Route list item. When Resume Route is pressed, all waypoints are resumed for guidance.

Navigation Voice Preferences

Press the Navigation Voice Preferences list item to adjust the voice preferences.

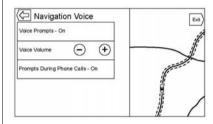

The following options can be adjusted:

- Voice Prompts ON/OFF
- Voice Volume
- Prompts During Phone Calls ON/OFF

Voice Prompts

Press the Voice Prompts list item to toggle voice prompts ON and OFF.

Voice Volume

Adjust the loudness of the audio feedback by pressing the – or + button. If a manoeuvre prompt is being played, and the main volume is adjusted, the prompt volume will update and be saved.



As the volume of the voice guidance is being adjusted, a quick status bar displays, showing the volume setting.


Prompts During Phone Calls

When enabled, the system plays a shorter prompt while on a phone call. This setting can be configured as to whether a prompt would be heard during a phone conversation.

When this setting is OFF, only the short alert tone is played when approaching the manoeuvre.

Current Location

Press the Current Location list item to display a Current Location list.

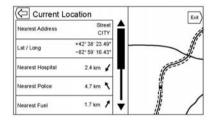

The following information is displayed on the Current Location list:


- Nearest Address
- Lat/Long
- Nearest Hospital
- Nearest Police Station
- Nearest Petrol Station
- Nearest Roadside Assistance

Pressing on any of the options will display the destination details view for that location to allow you to begin guidance to the selected location.

Press the Nearest Address button and then the Save screen button to store the current location to the Address Book.

Display Places of Interest Icons

Places of Interest (POI) icons can be displayed on the map using this view.

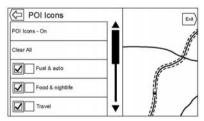


 The POI icons can be turned ON and OFF. Press the check box next to the POI icon to display the icon.

- Press Clear All to reset the icons that are displayed on the map.
- A subcategory can be selected instead of the entire category.
 Press the list item itself rather than the check box. The subcategories will display. Select any of those categories to navigate down the hierarchy.
- When a higher-level category
 has some of its subcategories
 selected, the checkmark next to
 it is greyed out. This indicates
 that only some of the categories
 below are shown. Press the
 greyed-out checkmark to turn all
 of the icons for that category on
 or off.

Map View

Press to select the desired map view. A checkmark appears to indicate a view has been selected.

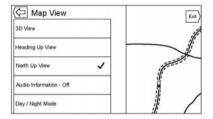

3D View

The 3D View is a Heading Up view but it includes perspective. Map items will appear larger as the vehicle comes closer.

Heading Up View

The Heading Up View keeps the vehicle's current heading at the top of the view. The vehicle icon always faces the top of the view as the map rotates.

North Up View

The North Up View keeps north at the top of the view. The vehicle icon is placed in the centre of the view and rotates to indicate the heading for the vehicle.

Audio Information On/Off

Press to turn the audio information view on or off from the main map view. When ON, the audio information becomes an audio status pane. This allows for two lines of audio information in the status pane and enables the use of some Interaction Selector controls.

The audio status screen contains the following elements:


- Station Frequency
- Artist Information
- Song Information
- ► / II or ► / ► Station and Channel Controls

Press the $\boxed{\blacktriangleleft}$ / $\boxed{\blacktriangleright}$ Station controls to go to the next or previous strong signal station or digital channel.

When the audio status pane displays Artist and Song Information, press the

✓ /

controls to go to the next or previous track based on the current media mode.

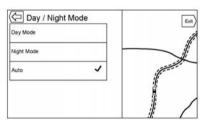

Day/Night Mode

Press to access the Day/Night Mode menu.

The options are:

Day Mode: Brightens the map background.

- Night Mode: Darkens the map background.
- Automatic: Adjusts the screen background automatically depending on the exterior lighting conditions.

Routing Preferences

Press the Routing Preferences list item to access the Routing Preferences menu. Options on how the routes are created for route guidance are listed on this menu.

Route Style

Press this list item to change the route type preferences.


The options are:

- Fast (default)
- Eco Friendly (if equipped)
- Short
- Configure Eco Profile

The Configure Eco Profile can be used to configure two parameters for the Eco Friendly route. These parameters are roof load and trailer.

For each parameter, the options are None, Small, Medium, and Large. Press to scroll through the list. The default for both is None.

These preferences are used for all routes generated.

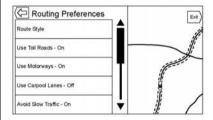


Route segment preferences are other options showing on the Routing Preferences menu.

This includes:

- Use Toll Roads ON/OFF
- Use Motorways ON/OFF
- Use Carpool Lanes ON/OFF
- Avoid Slow Traffic ON/OFF
- Use Tunnels ON/OFF

Use Time Restricted Roads
ON/OFF

Personal Data

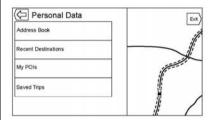

Data that the system has saved during the course of using the navigation system can be managed through:

- Address Book Entries
- Recent Destinations
- My POIs (if equipped)
- Upload Saved Locations

Address Book Entries

Press Address Book to edit.

Recent Destinations

- Press Delete Individual
 Destinations to display a recent
 destinations list. Select the
 individual entry to delete.
- Press Delete All Destinations to delete the entire recent destination list. A pop-up displays asking to confirm the deletion.

My POIs

- Press My POIs to display a menu of other options.
- Select Delete Individual Categories. A My POIs category list displays.
- Select the individual entry to delete.
- Press Delete All My POIs to delete the entire list of categories. A pop-up displays asking to confirm the deletion.

 To exit out of a list, press the EXIT screen button in the top right corner of the map to return to the main map view.

Upload Saved Locations: Press to upload any saved locations such as downloaded POIs and all entries in the vehicle address book to the USB device.

- Press Upload Saved Locations to save the Vehicle Contacts list and any MyPOIs that have been saved to the vehicle.
- Once saved locations have been uploaded to a USB, they can be transferred to a different vehicle or restored to the current address book.

Map Adjustments

ZOOM -/+ can be used to adjust the scale of view on the map. When the end of the zoom level is reached, ZOOM -/+ will grey out.

Use the pinch/spread hand gesture to zoom the scale of view on the map.

- ZOOM (minus): Pinch fingers together to zoom out.
- ZOOM + (plus): Spread fingers apart to zoom in.


The zoom scales can be configured for English or metric units. To change from English to metric, see "Instrument Cluster" in the owner manual.

Scroll Features



- To scroll within the map, press anywhere on the map screen.
- Nudge or slide a finger on the map; the map moves in the direction of the finger.

- Fling a finger on the map; the map will start scrolling in a short continuous scroll.
- Press a finger on the location on the map; the map recentres to the location that was pressed on.
- Press a finger twice on a location on the map; the map zooms in one level to the location that was pressed twice.
- When the map is recentred away from being locked to the vehicle position, the crosshairs will show in the centre of the map. As the map continues to be recentred, the crosshairs will remain on the screen. When the crosshairs are shown on the screen, a callout with more information displays. If the map is moved from the current location, the crosshairs will disappear along with the callout.

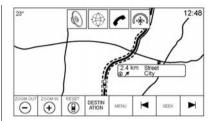

- Press a finger on the callout next to the crosshairs and the destination details view displays.
 From this view, route guidance can be received or saved to the vehicle's contact list.
- When the map is recentred, the straight-line distance from the vehicle to the selected point is displayed in the callout. In addition, a heading direction in the form of an arrow is displayed to indicate the direction. The arrow is shown in relation to the current vehicle heading.

- Press a finger on a POI icon shown on the map; the name of the POI is shown in the address callout, along with the city name and country. If the callout is selected, the destination details view for the POI is shown.
- After panning the map away from the vehicle, press RESET to return the map back to the current position.
- Press the Overview button to quickly get a view of the entire route. The route Overview button takes the place of the RESET button while under route guidance. Press the RESET button to return the map to the current position.

Maps

The map database is stored in the internal flash memory that is used in the navigation system.

Detailed Areas

Road network attributes are contained in the map database for detailed areas. Attributes include information such as street names. street addresses, and turn restrictions. A detailed area includes all major motorways, service roads, and residential roads. The detailed areas include Places of Interest (POIs) such as restaurants, airports. banks, hospitals, police stations, petrol stations, tourist attractions. and historical monuments. The map database may not include data for newly constructed areas or map database corrections that are completed after production. The navigation system provides full route guidance in the detailed map areas.

Navigation Symbols

Following are the most common symbols that appear on a map screen.



The vehicle symbol indicates the current position and heading direction of the vehicle on the map. When under route guidance, a circle with an arrow is added to the vehicle symbol which indicates the direction to the destination.


Vehicle Address Callout

Tap on the vehicle icon, the current address of the vehicle is overlaid on the map next to the vehicle icon in a callout. Another tap hides the information.

If the vehicle is in an area with an unknown address, the full address is shown. If only an address range is known, the callout shows the address range. If the vehicle is on a road that is not known, then that information may be dropped from the callout to leave only the City and State



The destination symbol marks the final destination after a route has been planned.

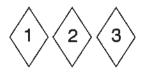

The waypoint symbol marks one or more set waypoints.

A waypoint is a stopover destination point added to the planned route.



The estimated time to the destination displays. Press the Arrival button to toggle to duration and to the distance of the destination.



This symbol indicates the recommended manoeuvre that should be performed. Press it to display the turn list or waypoint list.



The No GPS symbol appears when there is no Global Positioning System (GPS) satellite signal. When the GPS is gone, the vehicle position on the map may not be accurate.

Autozoom

As a manoeuvre is being approached, the map automatically zooms in to give greater detail.

If lane guidance is available for the manoeuvre, this is also shown.

When the system begins to autozoom, it zooms in to its minimum level. After the manoeuvre is performed, the system slowly zooms back out.


Driving on a Route

Manoeuvre Road Name

If the road name has multiple names, all names are shown.



Map View with Proximity

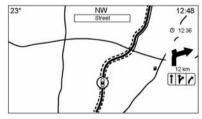


Map View Without Proximity

52

If the road that the system has calculated for the next manoeuvre has an icon, it will be shown to the left of the manoeuvre road name.

The distance to the manoeuvre is shown from the current location along the route to the manoeuvre.

Off-Road Indication

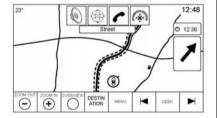

When driving in an area with no road showing on the map, the system transitions to off-road mode. The map displays a destination pointer in the Turn List area. The system will attempt to guide by showing a highlighted route starting at the nearest road. This road name is shown in the next manoeuvre name field at the top of the screen.

Navigation Next Turn Manoeuvre Alert



The navigation system may need to get the attention of the driver in certain situations.

If not in the navigation application when a near manoeuvre prompt is given, it is shown as an alert. The alert contains the turn indicator and button to display the main navigation view, or dismiss the alert.

The alert also contains the name of the street to turn on and a countdown bar.

Destination

If route guidance is not active, press the NAV screen button on the Home Page to access the map view. Press the Destination icon from the map view to enter a destination Available methods of entering a destination are Voice Recognition. Address. Recent Destination. Contacts, and POIs. Several options can be selected to plan a route. Some destination items may be greved out if no destination was previously entered or saved.




Press the DESTINATION button to go to the destination entry views.

Available Methods of Search

- Voice Recognition
- Address
- · Recent Destinations
- Contacts
- POIs (Points of Interest)

Press the DESTINATION button and the last used destination view is shown. This mode is retained. The initial default is Address.

Alpha-Numeric Keyboard

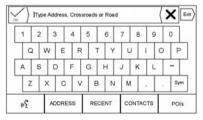

The keyboard is used in multiple locations throughout the system and can be used with many features. The navigation system uses the alpha-numeric system keyboard

which includes 1 through 0, A through Z in QWERTY layout, hyphen, comma, period, Space, and Sym which would show additional characters needed.

The keyboard can also be modified to include characters appropriate for the region configured in the vehicle settings.

✓ GO: Press to search for the destination details of an address or place of interest entered in the text field. Once the GO screen button is pressed, the activity indicator displays in the list of possible matches.

√ (Dropdown Arrow): Press to display a list of matches.

When there are multiple matches, a dropdown arrow is shown after the autocomplete text. This dropdown displays an entire list of matches. Press the appropriate match without having to enter more text.

X (Delete): Press to delete the last typed character. Press and hold this screen button to clear the entire text field. If the entire text field has been deleted, this screen button becomes an Undo button. Pressing Undo will restore the deleted text.

Exit: Press to return to the previous Map view.

Sym: Press to show the symbol keyboard.

Space: Press to enter a space between characters or the words of a name.

▲ (Up Arrow): Press to display the Interaction Selector.

Special Characters

As the characters are typed on the keyboard, a pop-up of the letter pressed displays above the key that was pressed.

Continue to press and hold, and any additional special characters associated with that letter are displayed around the current letter.

To select one of the special characters, slide a finger left or right to adjust the highlight of the special character.

Special Character List

The following characters have special characters beneath them:

```
        E-ÉÉÉÉÉÉÉ
        More Characters:

        Y-Ÿ
        0-°

        U-ÛÚÜÜÛ
        !-;

        I-Î[ÎÎÎÎ
        $.¥£¢

        O-ÔØŒÕÓÓÖÓ
        &-$

        A-ÀÁÂÆÄÄÄ
        "-«»

        S-ß(for lowercase s) $$
        ?-¿

        L-É
        {-[{

        Z-ŽŽ
        }-]

        C-ÇĆČ
        .com - .net .org
```

Address

 A destination can be searched by typing out the address, intersection, highway, or motorway entrance ramps on the keyboard. This information is typed and displayed in the information field. Press the search icon to start the search. For example:

Address: Main Centre 100

Road Name: Crawford, Country (if needed)

Intersection: North Square West Road Standish

Motorway: N-94

- Country information does not have to be included in the search field if entering an address that is located in the same country.
- Whenever the keyboard view is entered, the last text that was typed, even if it was not searched on, will display.
- A partial or complete address
 can be typed in the search field.
 If a partial address is typed, the
 system attempts to use local
 knowledge to fill in additional
 information. For example, if no
 city name or country are given,
 the system assumes a search
 for something in the current city
 or a nearby city in the current


country. The system is also capable of recognising address formats according to other regions.

If a destination address or location being entered is outside of the country, the country abbreviation must be added after the address. For example, if the current vehicle location is in Paris FR, and the destination is in Brussels Belgium, the correct input would be Brussels BE.


Intersection: If looking for an intersection, type in the two street names and optionally the city and country of the intersection.

On-Ramp: If looking for the closest on-ramp as a destination, enter a highway name. The direction is not required but can be specified. The system will search for the closest on-ramp.

Also available is the Exit-Ramp. For example, N-94 Exit 42.

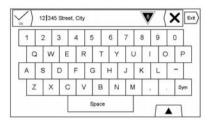

The keyboard can utilise an autocomplete function. Depending on the application, autocomplete matches entries that have been previously typed or are stored in a Recent Destinations list.

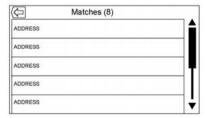

 After a character has been typed, the system is able to start displaying matches that begin

- with that character. The matches continually become more refined as additional characters are entered.
- If there are multiple matches for what has been entered, the first result alphabetically will be shown.
 - When there are multiple matches, a dropdown arrow is shown after the autocomplete text. This dropdown displays the entire list of matches. Press the appropriate match without having to enter more text.
- If autocomplete does not show the results needed, press the delete screen button to clear the autocomplete from the entered field.

If there are no matches, a pop-up displays in response to show how the system understood the entered text and attempts to show how the text could be entered to help find the destination.

Multiple Matches



- If the search results in multiple matches, a list of matches is shown.
- Address search results are grouped by result type, in the order of Full Addresses, Countries, Cities, Intersections, and Streets. If no results are found in a particular group, that group is not shown. If only one type of result is found, the single type result screen is shown. Within each group, they are listed in Confidence order. This means that the highest confidence result will be at the top.

56

Address searches can be sorted by Confidence, Distance, or Alphabetical Order.

Spelling Mistakes


The system is able to offer alternatives if the searched term is not found exactly. The system uses the closest term it finds and provides those results.

The system first searches the entered term exactly. If no matches are found, partial words are used. An example is, when entering in an address, the system attempts to do a full match on the entire string. If it does not find a match, the house number is then considered an optional term and the system attempts to find the street and city name. The prefix and suffix of street names are also treated as optional terms. The search is first done by trying to match the prefix and/or suffix. If there is no match found. these terms are removed from the search to make the search more generic.

Places of Interest (POI)



While at the Home Page, press the Nav screen button to display a view of the map. Press the Destination screen button to go to the destination entry views.

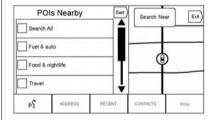

- Press the POIs screen button to display a list of POI categories.
 - The first list item in every POI list is a search function. For the highest level of categories, press the Search All screen button or select a category and search within that selection.
- 2. Select a POI category to display subcategories.
- 3. If a selected subcategory has no results in the surrounding area, the search is expanded until a result is found.




4. When a category is selected, the nearest locations are shown on the map and it lists the nearest

20 matches. If the limit is reached and no further matches display, there is a Show Next Results button to expand the search by another 10 results. The currently selected category or search term is shown in the title bar along with the number of matches shown in the list in parentheses.

- 5. Pan the map using the finger gestures to minimise the POI list and to interact with the map. The icons that were shown before continue to be displayed and updated. The list is also updated based on where the map was panned or zoomed. The search for POIs is constrained to where the map has been moved to. Press the list reveal button which is the arrow pointing right, near the left edge of the screen to display the list again.
- If the search map is pressed to recenter, the crosshairs are shown to indicate the centre of the new search location. If a POI

- icon is pressed on while in the full expanded map, a callout for that location displays. Press the callout to display the destination details view.
- 7. Press the map reset button to return the map to automatic zooming and searching. It is recentred around the vehicle's position, the route, the destination, or another location that was specified for the search. The map RESET button is only displayed if the map was manually adjusted.

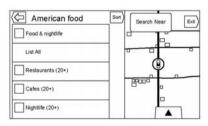

Press the List All screen button to display all of the matching results in a particular category with its subcategories.

Using the Keyboard

The POI can be searched by entering a POI name, category, name and category, or phone number on the keyboard.


For example, enter the information as:

POI Name: Worldwide Food

POI Category: Restaurants


POI Name and Category: Worldwide Food Restaurants

POI Phone Number: 0001222555

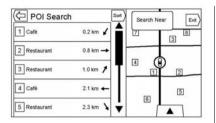

The POI keyboard search results will display in the order in which they were found. Press the Sort button to change the sorting order by Confidence, Alphabetical, or Distance.


POI Search Location

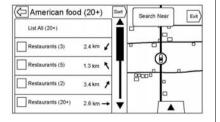

If browsing for POIs or searching for results on a keyboard in a different location than what was searched previously, press the Search Near button to specify a different location.

If not under route guidance, the search area options are:

- Nearby (default)
- Another Location

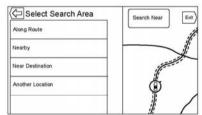

If under route guidance, the search area options are:

- Along Route (default)
- Nearby
- Near My Destination
- Another Location

Favourite POIs

Locations, categories, or a particular POI chain ID can be saved as Favourites in the POIs view.

Press and drag up on the row of interaction selector buttons to reveal the Favourite buttons.

Press and hold on a favourite location, then press on the category to be saved. Whenever a set of POIs is grouped, as in a category or a set of POIs that all belong to the same chain ID, the whole category or chain ID is saved in the favourites for recall. POIs are only grouped by chain when the sorting order is Alphabetical.

A POI search can also be saved as a Favourite. While in the POI search keyboard view, press and hold on a favourite location and the text that is currently typed in the keyboard will be saved.

Press the Sort button to change the sorting order.

Recalling a POI Category or Chain

If a POI category or chain favourite is recalled, the system displays a list of matching results defaulting to nearby, but allows a search of other locations. Press the Search Near button to specify a different location.

Creating and Downloading Predefined POIs (My POIs)

In addition to the POIs already stored in the Infotainment system, predefined POIs can be created.

While creating a predefined POI, the GPS coordinates for longitude and latitude of the POI's location and a descriptive name will need to be entered.

After creating the predefined POIs, they can be downloaded to the Infotainment system from either a USB stick or SD card.

Once downloaded, the POI data becomes a selectable destination in the My POIs menu.

Creating a Text File with Information

Create a text file by using a simple text editor software. Save this file with a name and extension of .csv, .e.g. "TomsPOI.csv."

Enter the POI information into the text file in the following format:

 Longitude coordinate, Latitude coordinate, "Name of POI," "Additional information," "Phone number."

Example: 7.0350000, 50.6318040, "Michaels Home," "123 Maple Lane," "02379234567."

- The GPS coordinates must be expressed in decimal degrees and can be taken from a geographical map. The additional information and phone number strings are optional.
- The POI name and the additional information string may not exceed 60 characters.

 POI information for each destination address must be entered in a single separate line.

Storing the POI on a USB Drive


In the root directory of a USB drive, create a folder name "myPOIs," e.g. "F:\" is the root directory of the USB drive.

In the "myPOIs" folder, store the text file with your POIs, e.g. "F:\myPOIs \TomsPOIs.csv."


Downloading the POI to the Infotainment System

Connect the USB drive or SD card containing the POI information to the USB port or SD card slot of the Infotainment system. A message displays prompting whether or not to download the POI information from the USB stick. All POIs found are saved even if they are in multiple folders.

Subfolders can also be created to organise the POIs into categories. For example, "F:\myPOIs \Restaurants\TomsPOIs.csv."

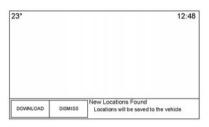

If the message is dismissed or ignored, no POI information is downloaded. This prompt will not recur for the current ignition cycle.

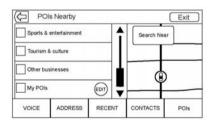

When the system is finished downloading, a pop-up displays asking to specify a category for the new POIs, if desired.

Importing and Overwriting Categories

When POIs are found on a media device, the date of the file is examined and compared to the date for the files already in the system. If the file being downloaded is newer than the one on the system, that particular category of POIs is overwritten. Any other POIs that had previously been saved in other categories are not affected.


Address Book Download

If an Address Book is found on the connected USB device, the same alert is used to indicate that locations have been found and they can be downloaded. If there is already content in the vehicle Address Book, the system prompts if the stored content should be overwritten. Select Save to overwrite the existing Address Book information. Select Cancel to abort the import of information.

Browsing Downloaded POIs


Access the downloaded POIs by selecting the My POIs list item in the POIs list.

Edit My POIs

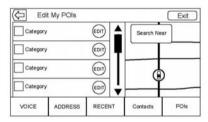

Downloaded POIs can be edited at a category level. These POIs can either be deleted as an entire category or be reassigned as another category. To edit the categories:

Select the Edit button at the main category view to edit the POIs. Edit buttons display next to each category name. There is no POI browsing in this mode, only edit functions are available. Once an action such as deleting or reassigning has been selected, the changes are saved immediately.

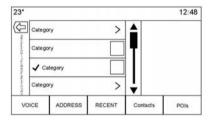

Changing POI Categories

POI categories can be assigned to a different category by using the same method as assigning a category for an Address Book entry. When editing, the right side of the screen displays the current category name.


Deleting POI

POI categories can be deleted by selecting Edit and then Delete. A pop-up displays to confirm the deletion.

Saved Destinations

Select a saved destination from the Contacts or Recent Destinations.


Contacts

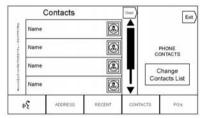

Select the Contacts button to view the vehicle's contact list or a connected Bluetooth device. Press the Change Contacts List screen button to switch between the vehicle's contact list and the Bluetooth device's contact list. If a particular contact has a single address associated with it, that contact has a Quick Route list item function button next to it. Contacts without this Quick Route button either have multiple addresses or no

address at all. Press the Quick Route button to go to the Destination Details view.

Press on an address, either from the Quick Route on the contact list or a specific address from the contact detail list, to go to the destination view showing that address on the map.

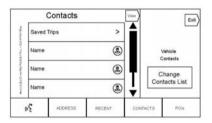

Trips from Contacts can be saved and recalled. The order is based on when the trip was last used. When the trips are saved, they are given a default title of the final destination name. If there are no saved trips, this list item is hidden.

Favourite Destinations


- Destinations can be saved as Favourites for recall later.
 Depending on the favourite, when an address or POI favourite is recalled, the Destination Details View is shown.
- When a favourite address is being routed to, it is shown active. Press on the active favourite, to suspend that route.
- Save locations as Favourites for recall later in the Destination Details View.
- "Saved" trips from the Address Book.

Storing Favourites from the Contact Details List

A contact name or any of the contact's information such as phone number, e-mail address, or address from Contact Details can be stored as a Favourite.

- Press and drag up on the row of interaction selector buttons to reveal the Favourite buttons.
- Press and hold on the favourite location while viewing a contact on the Contact Details List. The contact name and all contact information can be stored.
- Press to save as a favourite.
 The favourite label will be the name of the contact.
- Press on the Favourite to display the destination view.

Storing Favourites from Map

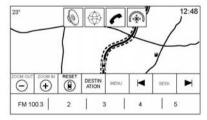


Favourite locations can be stored from the Map View.

If not under route guidance, the current vehicle location will be saved as a Favourite. If under route guidance, the final destination will be saved.

Press and drag up on the row of interaction selector buttons to reveal the Favourite buttons. Press and hold on the favourite location from the Map View to save it.


Route Guidance

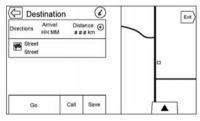

- Press GO to go to the main navigation view and to start route guidance.
- If the system has an active route, a pop-up will display, "What would you like to do with

- this destination?" The options are: Add As Waypoint, Set New Destination. or Cancel.
- If a waypoint is added, it is placed in the location that leads to the most efficient route.
- There is a maximum number of waypoints that can be added to the system. When the maximum number has been reached, a pop-up displays indicating that a waypoint must be deleted before a new one can be added. Even after a waypoint has been deleted, it will be added to the recent destinations list for easy recall.
- To save a location as a favourite location, press and drag up on the row of interaction selector buttons to reveal the Favourite buttons. Press and hold on a favourite location to save the shown location as a Favourite.

Estimated Time of Arrival (ETA) and Distance

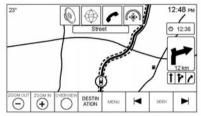

- When under route guidance, the system shows the ETA or travel time, or the driving distance.
- The ETA and travel time are calculated using any available traffic information.
- If in a waypoint trip, the ETA, travel time, and driving distance are all shown relative to the final destination.
- The final ETA is shown taking into consideration any time zone crossings that the route has travelled through.

Press the ETA information area to switch between the estimated arrival time, total driving time resulting, and driving distance.

Turn List

Press on the next turn indicator shown on the map to display the turn list or waypoint list. The Interaction Selector is minimised automatically. Press ▲ to reveal the following options:


Destination

Press the Destination screen button to add a waypoint or change the destination while viewing the turn list. When the Destination screen button is pressed, the display shows the Destination screens.

End Guidance

Press the End Guidance screen button to suspend the current route in the turn list. When the End Guidance screen button is pressed, the turn list is exited and the display returns to the main map view. Press the Avoid Areas screen button to select the highway name that is to be avoided. The system shows a pop-up asking how many miles or if the entire road should be avoided.

Turn List

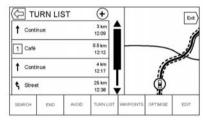

- When under a waypoint trip, press on the Turn List Interaction Selector button to show the turn list. When entering a turn list, the next manoeuvre instruction is spoken.
- The turn list title is the name or address of the destination. Press on the information button next to


- the name of the destination to display the destination information.
- The turn list is sorted in order with the next manoeuvre at the top of the list and the subsequent manoeuvres listed below it. The next manoeuvre is always highlighted upon entry into the Turn List to quickly show what the next manoeuvre is.
- Each manoeuvre indicates the distance between it and the previous manoeuvre or the vehicle's current location. The next manoeuvre at the top will count down until the manoeuvre is reached, and then the next manoeuvre will begin to count down.
- Each manoeuvre has an estimated time of arrival based on the current driving conditions.

Saved Trips

Waypoint trips can be saved for later recall. Press the Add button in the waypoints list to save the trip to the Saved Trips list in the vehicle's contacts list. When trips are saved, they are given a default title of the final destination. Saved trips can be edited by selecting the Edit list item button to access the edit screen for the saved entry. The only field that can be edited is the name field. Press on the name field to access. the keyboard view. Type the name change. This change is automatically saved when executed by the keyboard.

The saved trip can also be deleted from the edit mode. Press the delete button and a delete confirmation pop-up will display.

Waypoints

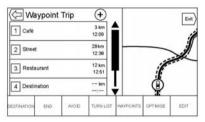

- When under a waypoint trip, press on the next turn indicator to bring up the waypoint list. The last waypoint view is shown, which could be Waypoints, Turn List, or Edit Route.
- The waypoint list is sorted in order with the next waypoint at the top of the list. Each waypoint is indicated with a numbered icon, starting with the next waypoint.
- To indicate what segment of the route is for the next waypoint, and what is for the remainder of the route, they appear in different colours.

Optimised Route


- Press the Optimise screen button to optimise the current waypoint trip.
- The optimisation is done according to how the preferences are set for new routes, e.g., fastest route, shortest distance, or eco friendly.
- While the system is optimising the route, the waypoint trip has the activity indicator displayed over top of it. If the system is calculating the ETA and travel distance for a waypoint, the activity indicator is displayed in the list header.
- When either a waypoint trip is first created, or additional waypoints are added to an existing waypoint trip, they are added in the location that would lead to an optimised route.

- If a destination is already planned and a waypoint is added, it is either added before or after the current destination, whichever leads to the most optimal route.
- If under an existing waypoint trip consisting of two or more destinations, any additional waypoints are added in the location that would lead to the most optimal route.

Edit Route

- Press the Edit Route screen button to modify the order or remove a waypoint from the route. Press the delete screen button to remove a waypoint from the route.
- A pop-up displays asking for confirmation of the waypoint deletion.

Settings

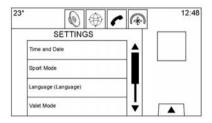

Press Settings on the Home Page to adjust features and preferences, such as Time and Date, Sport Mode, Language, Valet Mode, or Radio. For setting options, see Settings on page 84.

A few of the setting options change the way the navigation system displays or reacts while in use.

- Press the Settings screen button on the Home Page.
- Press the scroll bar until the desired option displays. Select the desired settings to change.

Voice

Voice recognition allows for hands-free operation within the navigation, audio, and phone applications. See *Voice Recognition on page 69*.

Press the voice screen button to display the Speech menu.

Prompt Length: Press to change the prompt length to Short or Long.

Audio Feedback Speed: Press to change the auto feedback speed to Slow, Medium, or Fast.

Confidence Threshold: Press to change the sensitivity of speech recognition system.

Display

Mode: Press Mode to change the screen background. This setting controls map colours.


 The Auto setting adjusts the screen background automatically depending on the exterior lighting conditions.

- The Day setting brightens the map background.
- The Night setting darkens the map background.


Calibrate Touchscreen: Press to display the Touchscreen Calibration Screen.

Turn Display Off: Press to turn the Display option off.

Low Fuel Alert

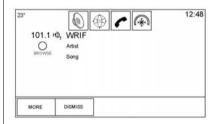

If the vehicle reaches a low fuel level, the system displays an alert about the low fuel condition. Press the More Info screen button to view nearby gas stations, and start guidance if desired.

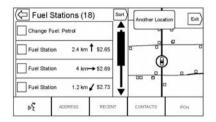

If the remaining driving distance is available from the system, this is included in the alert.

Global Positioning System (GPS)

The position of the vehicle is determined by using satellite signals, various vehicle signals, and map data.

At times, other interference such as the satellite condition, road configuration, condition of the vehicle, and/or other circumstances can affect the navigation system's ability to determine the accurate position of the vehicle.

The GPS shows the current position of the vehicle using signals sent by GPS Satellites. When the vehicle is not receiving signals from the satellites, a symbol appears on the map screen. See *Navigation Symbols on page 50*.

This system might not be available or interference can occur if any of the following are true:

- Signals are obstructed by tall buildings, trees, large trucks, or a tunnel.
- Satellites are being repaired or improved.

For more information if the GPS is not functioning properly, see *Problems with Route Guidance on page 68* and *If the System Needs Service on page 69*.

Vehicle Positioning

At times, the position of the vehicle on the map could be inaccurate due to one or more of the following reasons:

- The road system has changed.
- The vehicle is driving on slippery road surfaces such as sand, gravel, or snow.
- The vehicle is travelling on winding roads or long straight roads.
- The vehicle is approaching a tall building or a large vehicle.
- The surface streets run parallel to a freeway.
- The vehicle has been transferred by a vehicle carrier or a ferry.
- The current position calibration is set incorrectly.
- The vehicle is travelling at high speed.

- The vehicle changes directions more than once, or the vehicle is turning on a turn table in a car park.
- The vehicle is entering and/or exiting a car park, garage, or a car park with a roof.
- The GPS signal is not received.
- A roof carrier is installed on the vehicle.
- Tyre chains have been installed.
- The tyres are replaced or worn.
- The tyre pressure is incorrect.
- This is the first navigation use after the map data is updated.
- The 12-volt battery is disconnected for several days.
- The vehicle is driving in heavy traffic where driving is at low speeds, and the vehicle is stopped and started repeatedly.

Problems with Route Guidance

Inappropriate route guidance can occur under one or more of the following conditions:

- The turn was not made on the road indicated
- Route guidance might not be available when using automatic rerouting for the next right or left turn
- The route might not be changed when using automatic rerouting.
- There is no route guidance when turning at an intersection.
- Plural names of places might be announced occasionally.
- It could take a long time to operate automatic rerouting during high-speed driving.
- Automatic rerouting might display a route returning to the set waypoint if heading for a destination without passing through a set waypoint.

- The route prohibits the entry of a vehicle due to a regulation by time or season or any other regulation which may be given.
- Some routes might not be searched
- The route to the destination might not be shown if there are new roads, if roads have recently changed, or if certain roads are not listed in the map data. See Maps on page 49.

To recalibrate the vehicle's position on the map, park with the vehicle running for two to five minutes, until the vehicle position updates. Make sure the vehicle is parked in a location that is safe and has a clear view of the sky and away from large obstructions.

If the System Needs Service

If the navigation system needs service and the steps listed here have been followed but there are still problems, see *Problems with Route Guidance on page 68*.

Map Data Updates

The map data in the vehicle is the most up-to-date information available when the vehicle was produced. The map data is updated periodically, provided that the map information has changed.

For questions about the operation of the navigation system or the update process, contact the GM Nav Disc Centre toll-free phone number, 1-877-NAV-DISC (1-877-628-3472) or go to the centre's website, www.gmnavdisc.com. If updates are needed, call the GM Nav Disc Centre or order online.

To order, have the vehicle's Vehicle Identification Number (VIN) available. This helps the centre make sure that the correct and most up-to-date map data for the vehicle is received. See "Vehicle Identification Number (VIN)" in the owner manual.

Database Coverage Explanations

Coverage areas vary with respect to the level of map detail available for any given area. Some areas feature greater levels of detail than others. If this happens, it does not mean there is a problem with the system. As the map data is updated, more detail can become available for areas that previously had limited detail. See *Map Data Updates on page 69*.

Voice Recognition

Voice recognition allows for hands-free operation within the navigation, audio, phone, and weather applications. This feature can be started by pressing either the ws button on the steering wheel or the ws on the touchscreen display.

However, not all features within these areas are supported by voice commands. Generally, only complex tasks that require multiple manual interactions to complete are supported by voice commands.

For example, tasks that take more than one or two button presses such as selecting a song or artist to play from a media device would be supported by voice commands. Other tasks, like adjusting the volume or seeking up or down, are audio features that are easily performed by pressing one or two buttons, and are not supported by voice commands.

In general there are flexible ways to speak commands for completing the tasks. Most of them, except destination entry and voice keypad, can be completed in a single command. If the task takes more than one command to complete, the first command would be to indicate the kind of task to be performed, like "Nav." The system replies with prompts that lead you through a dialogue to enter the necessary information. For example, if a destination for route guidance is needed, say "Navigation" or "Nav commands "

Voice recognition can be used when the ignition is on or when Retained Accessory Power (RAP) is active. See "Retained Accessory Power (RAP)" in the owner manual.

Using Voice Recognition

Voice recognition becomes available once the system has been initialised. This begins when the ignition is turned on. Initialisation may take a few moments.

- 1. Press on the steering wheel control to activate voice recognition, or press on the infotainment touchscreen on the centre stack
 - If voice recognition is started from the steering wheel control, the instrument cluster displays the selections and visual dialogue content.
 - If voice recognition is started from the infotainment touchscreen on the centre stack, the selections and visual dialogue content are displayed on both the centre stack display and the instrument cluster display.
- 2. The audio system mutes and the system plays a prompt followed by a beep.

3. Wait until after the beep completes, then clearly speak one of the commands described in this section.

A voice recognition system prompt can be interrupted while it is playing by pressing \(\frac{1}{2} \) again.

For example, if the prompt seems to be taking too long to finish, press k again and the beep should happen right away.

There are two voice prompt modes supported:

- Long verbal prompts: The longer prompts provide more information regarding the supported actions.
- Short prompts: The short prompts provide simple instructions about what can be stated

If a command is not spoken, the voice recognition system says a help prompt.

Prompts and Screen Displays

While a voice recognition session is active, there will be corresponding buttons on screens displayed. Manual interaction in the voice recognition session is permitted. Interaction during a voice session may be completed entirely using voice commands, or some selections may expedite a session. If a selection is made using a manual control, the dialogue will progress in the same way as if the selection was made through a voice command. Once the system is able to complete the task, or the session is terminated, the voice recognition dialogue stops.

An example of this type of manual intervention is pressing on an entry of a displayed number list instead of speaking the number associated with the entry desired.

Cancelling Voice Recognition

- Press the Home screen button. Pressing this button will terminate the voice recognition session.
- Press or say "cancel" or "end" to terminate the voice recognition session and display the screen from which voice recognition was initiated.
- Press on the steering wheel controls to terminate the voice session and display the screen from which voice recognition was initiated.

Most languages do not support natural language commands in sentence form. For those languages, use direct commands like the examples shown on the display.

Helpful Hints for Speaking Commands

Voice recognition can understand commands that are either naturally stated in sentence form or direct commands that state the application and the task.

For best results:

- Listen for the prompt and wait for the beep before saying a command or reply.
- Say "help" or look at the screen display for example commands.
- Voice recognition system prompt can be interrupted while it is playing by pressing w again.

For example, if the prompt seems to be taking too long to finish, to speak the command without waiting for the prompt to complete, press of again and wait for the beep.

- Speak the command naturally, not too fast, not too slow. Use direct commands without a lot of extra words.
- Usually Phone and Audio commands can be spoken in a single command.
 - For example, "Call David Smith at work," "Play" followed by the artist or song name, or "Tune" followed by the radio station number.
- Navigation destinations are too complex for a single command. First, state a command that explains the type of destination needed, such as I want directions to an "Address," "go to crossroads," "destination POI," or "destination contact." The system responds with requesting more details. After saying "destination entry POI," only major chains are available by name. Chains are businesses with at least 20 locations. For

other POIs, say the name of a category like "Restaurants," "Shopping Malls," or "Hospitals."

Most languages do not support natural language commands in sentence form. For those languages, use direct commands like the examples shown on the display.

There is no need to memorise specific command words. Direct commands might be more clearly understood by the system. An example of a direct command would be "Call 555-1212." Examples of these direct commands are displayed on most of the screens while a voice session is active. If "Phone" or "Phone Commands," is stated, the system understands that a phone call is requested and will respond with questions until enough details are gathered.

If the phone number has been saved with a name and a place, the direct command should include both, for example "Call David Smith at work."

Using Voice Recognition for List Options

When a list is displayed, a voice prompt will ask to confirm or select an option from that list. A selection can be made by manually selecting the item, or by speaking the line number for the item to select.

When a screen contains a list, there may be options that are available but not displayed. The list on a voice recognition screen functions the same as a list on other screens. Scrolling or flinging can be used to help display other entries from the list.

Manually scrolling or paging the list on a screen during a voice recognition session suspends the current voice recognition event and plays the prompt "Make your selection from the list using the manual controls, press ■ BACK on the faceplate, or press the Back screen button to try again."

If manual selection takes more than 15 seconds, the session terminates and prompts that it has timed out. The screen returns back to the screen where voice recognition was initiated.

The Back Command

Say "Back" or press ◀ BACK on the faceplate, or press the Back screen button to go to the previous screen.

If in voice recognition, and "Back" is stated all the way through to the initial screen, then "Back" is stated one more time, the voice recognition session will cancel.

Help

Say "Help" on any voice recognition screen and the help prompt for the screen is played. Additionally, a pop-up displays a text version of the help prompt. Depending on how voice recognition was initiated, the Help pop-up will either display on the instrument cluster or the infotainment touchscreen. Press the Dismiss button to make the pop-up go away.

Pressing ws while the help prompt is playing will terminate the prompt and a beep will be heard. Doing this will stop the help prompt so that a voice command can be used.

Voice Recognition for the Radio

All audio screens have a voice recognition button ((w\(\xi\)) to launch audio voice recognition. If the voice button is pressed in a radio screen, the voice commands for radio and media features are available.

"Switch to AM": Switch bands to AM and tune to the last AM radio station.

"Switch to FM": Switch bands to FM and tune to the last FM radio station.


"Tune to <AMFrequency> AM":

Tune to the radio station whose frequency is identified in the command (like "nine fifty").

"Tune to <FMFrequency> FM":

Tune to the radio station whose frequency is identified in the command (like "one o one point one").

Voice Recognition for Audio My Media

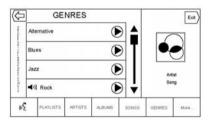

If browsing My Media when the voice button is selected, the voice recognition commands for My Media features are available.

"Play Artist": Begin a dialogue to enter a specific Artist name.

- "Play Artist <Artistname>": Begin playback of the media selection identified in the command.
- "Play Album": Begin a dialogue to enter a specific album name.
- "Play Album <Albumname>": Begin playback of the identified album name in the command.
- "Play Song": Begin a dialogue to enter a specific song name.
- "Play Song <Songname>": Begin playback of the identified song name in the command.
- "Play Genre": Begin a dialogue to enter a specific genre.
- "Play Genre <Genrename>": Begin playback of the media selection identified in the command.
- "Play Playlist": Begin a dialogue to enter a specific playlist name.
- "Play Playlist <Playlistname>": Begin playback of the identified playlist in the command.

- "Play <Devicename>": Play music from a specific device identified by name. The device name is the name displayed on the screen when the device is first selected as an audio source.
- "audiobook chapter": Begin a dialogue to enter a specific name.
- "Play Chapter < Chaptername>": Begin playback of the media selection identified in the command.
- "Play Audiobook": Begin a dialogue to enter a specific name.
- "Play Audiobook <Audiobookname>": Begin playback of the media selection identified in the command.
- "play track <Tracknumber>":
 Begin playback of the CD at the
 track identified in the command.
- "Play Episode": Begin a dialogue to enter a specific name.
- "Play Episode <Episodename>": Begin playback of the media selection identified in the command.

- "Play Podcast": Begin a dialogue to enter a specific name.
- "Play Podcast <Podcastname>": Begin playback of the media selection identified in the command.
- "Play Video": Begin a dialogue to enter a specific name.
- "Play Video <Videoname>": Begin playback of the media selection identified in the command.
- "My Media": Begin a dialogue to enter the desired media content.

Handling Large Amounts of Media Content

It is expected that large amounts of media content will be brought into the vehicle. It may be necessary to handle large amounts of media content in a different way than smaller amounts of media. The system may limit the options of voice recognition by not allowing selection of song titles by voice at the highest level if the number of songs exceeds the maximum limit.

Voice command option changes through media content limits are:

- Song files including other individual files of all media types such as audiobook chapters, podcast episodes, and videos.
- Album type folders including types such as albums and audiobooks.

There are no restrictions if the number of song files and albums is less than 4,000. When the number of song files connected to the system is between 4,000 and 8,000, the content cannot be accessed directly with one command like "Play <songname>."

The restriction is that the command "Play Song" must be spoken first; the system will then ask for the song name. The reply command would be to say the name of the song to play.

Similar limits exist for album content. If there are more than 4,000 albums, but less than 8,000, the content cannot be accessed

directly with one command like, "Play <albumname>." The command "Play Album" must first be spoken; the system will then ask for the album name. The reply would be to say the name of the album to play.

Once the number of songs has exceeded approximately 8,000, there is no support for accessing the songs directly through voice commands. There will still be access to the media content by using commands for playlists, artists, and genres.

The access commands for playlists, artists, and genres are prohibited after the number of this type of media exceeds 4,000.

The system will provide feedback the first time voice recognition is initiated if it has become apparent that any of these limits are reached during a device initialising process.

Voice Recognition for Navigation

"Navigation": Begin a dialogue to enter specific destination information.

"Navigation Commands": Begin a dialogue to enter specific destination information.

"Destination Address": Begin a dialogue to enter a specific destination address, which includes the entire address consisting of the house number, street name, and city and state.

"destination crossroad": Begin a dialogue to enter a specific destination intersection.

"destination POI": Begin a dialogue to enter a destination Place of Interest category or major brand name (if equipped).

Not all brand names of businesses are available for voice entry. Most major chains, such as chains with more than 20 locations, should be available to search for by name, but

the name must be precisely spoken. Nicknames or short names for the businesses will not likely be found. Lesser known businesses might have to be located by category, such as fast food, hotels, or banks.

"Destination Contact": Begin a dialogue to enter a specific destination contact name.

"Cancel Route": End route guidance.

Voice Recognition for the Phone

"Call <contactname>": Initiate a call to an entered contact. The command may include location if the contact has location numbers stored.

"call <contactname> At Home,"
"call <Contactname> at work,"
"call <Contactname> on mobile,"
or "call <Contactname> 's
other": Initiate a call to an entered
contact and location at home, at
work, on mobile device, or on
another phone.

"Call <phonenumber>": Initiate a call to a standard phone number seven or 10 digits in length, and also 112.

"Pair Phone": Begin the Bluetooth pairing process. Follow instructions on the radio display.

"Redial": Initiate a call to the last dialled number.

"Switch Phone": Select a different phone for outgoing calls.

"Voice Keypad": Begin a dialogue to enter special numbers like international numbers. The numbers can be entered in groups of digits with each group of digits being repeated back by the system. If the group of digits is not correct, the command "Delete" will remove the last group of digits and allow them to be re-entered. Once the entire number has been entered, the command "Call" will start dialling the number.

"Voice mail": Initiate a call to voice mail numbers.

Phone

Bluetooth (Overview)

The Bluetooth-capable system can interact with many cell phones, allowing:

- Placement and receipt of calls in a hands-free mode.
- Sharing of the mobile phone's address book or contact list with the vehicle.

To minimise driver distraction, before driving and with the vehicle parked:

- Become familiar with the features of the mobile phone.
 Organise the phone book and contact lists clearly and delete duplicate or rarely used entries.
 If possible, program speed dial or other shortcuts.
- Review the controls and operation of the infotainment system.

- Pair mobile phone(s) to the vehicle. The system may not work with all mobile phones. See "Pairing" in this section.
- See "Storing and Deleting Phone Numbers" in this section.

Vehicles with a Bluetooth system can use a Bluetooth-capable mobile phone with a Hands-Free Profile to make and receive phone calls. The infotainment system and voice recognition are used to control the system. The system can be used while in ON/RUN or ACC/ ACCESSORY. The range of the Bluetooth system can be up to 9.1 m (30 ft). Not all phones support all functions and not all phones work with the Bluetooth system. See www.am.com/bluetooth for more information about compatible phones.

Controls

Use the buttons on the infotainment system and the steering wheel to operate the Bluetooth system.

Steering Wheel Controls

★ (Push to Talk): Press to answer incoming calls and start voice recognition.

(End Call): Press to end a call, decline a call, or cancel an operation. Press to mute or unmute the infotainment system when not on a call.

Infotainment System Controls

For information about how to navigate the menu system using the infotainment controls, see *Infotainment on page 3*.

PHONE: Press this screen button to enter the phone main menu.

Audio System

When using the Bluetooth phone system, sound comes through the vehicle's front audio system

speakers and overrides the audio system. Press just above the chrome volume bar during a call to change the volume level. The adjusted volume level remains in memory for later calls. The system maintains a minimum volume level.

Bluetooth (Infotainment Controls)

For information about how to navigate the menu system using the infotainment controls, see *Infotainment on page 3*.

Pairing

A Bluetooth-enabled mobile phone must be paired to the Bluetooth system and then connected to the vehicle before it can be used. See the mobile phone manufacturer's user guide for Bluetooth functions before pairing the mobile phone.

Pairing Information

- A Bluetooth phone with music capability can be paired to the vehicle as a phone and a music player at the same time.
- Up to 10 devices can be paired to the Bluetooth system.
- The pairing process is disabled when the vehicle is moving.
- Pairing only needs to be completed once, unless the pairing information on the mobile phone changes or the mobile phone is deleted from the system.
- If multiple paired cell phones are within range of the system, the system connects to the paired cell phone in the order that they were last used in the system. To link to a different paired phone, see "Linking to a Different Phone" later in this section.

Pairing a Phone

- 1. Press the PHONE screen button.
- 2. Select PHONES and select Pair Device.
- A four-digit Personal Identification Number (PIN) appears on the display. The PIN, if required, may be used in Step 5.
- Start the pairing process on the mobile phone to be paired to the vehicle. See the mobile phone manufacturer's user guide for information on this process.
- Locate "Cadillac CUE" on the display. Follow the instructions provided in Step 3 on the cell phone to enter the PIN or confirm the six-digit code shown on the display. After the PIN is successfully entered or the code is confirmed, the system responds with "<Device name>

- has been successfully paired" when the pairing process is complete.
- If "Cadillac CUE" does not appear, turn the phone off or remove the phone battery and retry.
- If the phone prompts to accept connection or allow phone book download, select Always Accept and Allow. The phone book may not be available if not accepted.
- 8. Repeat Steps 1–7 to pair additional phones.

Listing All Paired and Connected Phones

- Press the PHONE screen button.
- 2. Select PHONES.

Disconnecting a Connected Phone

- Press the PHONE screen button.
- 2. Select PHONES.

3. Press the X next to the phone to disconnect.

Deleting a Paired Phone

Only disconnected phones can be deleted.

- Press the PHONE screen button.
- 2. Select PHONES.
- Press the [□] next to the phone to delete and follow the on screen prompts.

Linking to a Different Phone

To link to a different phone, the new phone must be in the vehicle and paired to the Bluetooth system.

- Press the PHONE screen button.
- 2. Select PHONES.
- Select the new phone to link to from the not connected device list.

Switching to Handset or Handsfree Mode

To switch between handset or handsfree mode, press the PHONE icon on the Home Page to display "Call View."

- While the active call is hands-free, press the Handset screen button to switch to the handset mode. The screen button changes to Handsfree once the Bluetooth device confirms it is operating as handset.
- While the active call is on the handset, press the Handsfree screen button to switch to the hands-free mode. The screen button changes to Handset once the Bluetooth device confirms it is operating as handsfree.

Making a Call Using Contacts and Recent Calls

Calls can be made through the Bluetooth system using personal mobile phone contact information for all phones that support the Phone Book feature. Become familiar with the phone settings and operation. Verify the mobile phone supports this feature.

When supported, the Contacts and Recent Calls menus are automatically available.

The Contacts menu accesses the phone book stored in the cell phone.

The Recent Calls menu accesses the recent call list(s) from your cell phone.

To make a call using the Contacts menu:

- Press the PHONE screen button.
- 2. Select CONTACTS.
- 3. Select the name to call.

4 Select the desired contact. number to call

To make a call using the Recent Calls menu:

- Press the PHONE screen. button.
- 2. Select RECENT.
- 3. Select the name or number. to call.
- 4. If necessary, select between Missed, Recent, and Sent calls by selecting the View button in the top right corner of the list.

Making a Call Using the Keypad

To make a call by dialling the numbers:

- Press the PHONE screen. button.
- Select KEYPAD and enter a phone number.
- 3. Select Call to start dialling the number.

Accepting or Declining a Call

When an incoming call is received, the infotainment system mutes and a ring tone is heard in the vehicle.

Accepting a Call

There are three ways to accept a call:

- Press on the steering wheel controls
- Press Answer on the centre stack display.
- Press Answer on the instrument cluster using the select button.

Declining a Call

There are three ways to decline a call:

- Press on the steering wheel controls.
- Press Ignore on the centre stack display.
- Press Ignore on the instrument cluster using the select button.

Call Waiting

Call waiting must be supported on the Bluetooth phone and enabled by the wireless service carrier to work.

Accepting a Call

There are three ways to accept a call-waiting call:

- Press on the steering wheel controls
- Press Switch on the centre stack display.
- Press Switch on the instrument cluster using the select button.

Declining a Call

There are three ways to decline a call-waiting call:

- Press on the steering wheel controls.
- Press Ignore on the centre stack display.
- Press Ignore on the instrument cluster using the select button.

Switching Between Calls (Call Waiting Calls Only)

To switch between calls, press the phone icon on the Home Page to display "Call View." While in Call View, press the call information of the call on hold to change calls.

Three-Way Calling

Three-way calling must be supported on the Bluetooth phone and enabled by the wireless service carrier to work.

To start a three-way call while in a current call:

- 1. In the Call View, select Add to add another call.
- Initiate the second call by selecting from RECENT, CONTACTS, or KEYPAD.
- When the second call is active, press Merge to conference the three-way call together.

 Once all calls are merged, the Merge button becomes an Unmerge button. Press to unmerge the calls.

Some wireless service carriers may not allow a merged call to become unmerged.

Ending a Call

- Press on the steering wheel controls.
- Press End on the centre stack display to end all existing calls, or press End next to a call to end only that call.
- Press End on the instrument cluster using the select button.

Dual Tone Multi-Frequency (DTMF) Tones

The in-vehicle Bluetooth system can send numbers during a call. This is used when calling a menu-driven phone system.

Press the PHONE screen button.

- While in the Call View, press the up arrow to raise the Interaction Selector.
- Select KEYPAD and enter the number.

Voice Mail

The default voice mail number is the phone number of the outgoing phone source. The voice mail number can be changed in Bluetooth settings.

To dial a voice mail number:

- 1. Press the PHONE screen button.
- 2. Select VOICE MAIL.
- Select Call.
- Enter the DTMF tones using the keypad if needed.

Bluetooth (Voice Recognition)

Using Bluetooth Voice Recognition

To use voice recognition, press the button on the steering wheel. Use the commands below for the various voice features. For additional information, say "Help" while in a voice recognition menu. See Voice Recognition on page 69 for help using voice recognition commands.

Making a Call

Calls can be made using the following commands.

Using the "Dial" or "Call" Command

To call a number:

- Press ⋈∑. The system responds "Command Please," followed by a tone.
- 2. Say "Dial" or "Call" followed by the complete phone number.

Use the "Voice Keypad" command for international numbers or special numbers which include * or #.

Once connected, the person called will be heard through the audio speakers.

To call using a contact from your phone book:

- Press ¹√2. The system responds "Command Please," followed by a tone.
- Say "Dial" or "Call" and then say the contact name. For example "Call John at Work."

Once connected, the person called will be heard through the audio speakers.

Calling 112 Emergency

- Press ⋈∑. The system responds "Command Please," followed by a tone.
- 2. Say "Call 112."

Once connected, the person called will be heard through the audio speakers.

Using the "Switch Phone" Command

- Press ⋈∑. The system responds "Command Please," followed by a tone.
- 2. After the tone, say "Switch Phone." The system displays a list of phones to select.

Using the "Voice Keypad" Command

- Press ¹√2. The system responds "Command Please," followed by a tone.
- After the tone, say "Voice Keypad." The system allows entry of special numbers and characters.

Using the "Voice Mail" Command

- Press №. The system responds "Command Please," followed by a tone.
- 2. After the tone, say "Voice mail." The system dials the voice mail number of the connected phone.

Clearing the System

Unless information is deleted out of the vehicle Bluetooth system, it will be retained. This includes phone pairing information. For directions on how to delete this information, see "Deleting a Paired Phone."

Text Messaging

If equipped, the infotainment system may allow text messages to be received and replied to. Received messages can also be read aloud.

Text Menu

Inbox: Press to display incoming messages. To view a message, press on the name of the sender.

Press • to listen to the text message. Press the Back screen button to go back to the previous menu.

Settings: See "Text Settings" later in this section.

Reply: Press to reply using a predefined text message. See "Text Settings."

Call: Press to place a call to the sender of the text message.

Viewing a Text Message

While viewing a text message:

- Press Reply to reply using a predefined text message.
- Press Call to place a call to the sender of the text message.

Viewing Sender Information

If equipped, press the name of the sender to view sender information if this information matches contact information already stored.

Select a Predefined Message:

Press to select from a set of quick messages. Press the message to send.

Predefined Messages

These are short text messages that can be used to send so responses will not have to be typed.

The messages can be deleted or a new message can be added.

To add a new message:

- 1. Press Text Settings, then press Manage Predefined Messages.
- While in the predefined messages list view, select Add New Predefined Message and a keyboard displays.

3. Type a new message and press NFW MSG when done to add the message. Press the **\(\)** Back screen button to go back to the predefined messages list. Press X to delete one character at a time.

Memory Full

This message may display if there is no more room on the phone to store messages.

Text Settings

Text Alerts: When on, this feature will display an alert when a new text message has been received. Press to turn on or off

Manage Predefined Messages:

Press to add, change, or delete predefined messages.

Settings

The Settings Menu allows adjustment of different vehicle and radio features. The menu may contain the following:

Time and Date

See "Clock" in the owner manual.

Language

This will set the display language in the radio, instrument cluster, and voice recognition. Press Language and select the appropriate language. Press the **\(\)** Back screen button to go back to the previous menu.

Valet Mode (If Equipped)

This will lock the infotainment system, the infotainment controls, and screen storage locations, if equipped. Enter a four-digit code on the keypad. Press Enter to go to the confirmation screen. Re-enter the four-digit code. Press LOCK to lock the system. Enter the four-digit code to unlock the system. Press the Back screen button to go back to the previous menu.

Radio

Press to display the Radio Menu and the following may display:

- Manage Favourites: Press a displayed Favourite to select that favourite to edit. Press. Rename to rename the favourite or Delete to delete it. Press and hold the station to drag it to a new location. Press Done to go back to the previous menu.
- Number of Favorites Shown: Press to set the number of favourites to display. Select Auto. 5. 10. 15. 20. 25. 30. 35. 40, 45, 50, 55, or 60. Auto will automatically add or hide additional Favourite pages based on the amount of Favourites stored. Press the Back screen button to go back to the previous menu.

- Tone Settings: Press + or to adjust Bass, Midrange, Treble, or Surround. See AM-FM Radio on page 10.
- Tag Song: Press to tag song information, including artist and title, to transfer to an iPod[®]. See AM-FM Radio on page 10.
- Time Shift: Timeshift is the recording of a radio station for up to 25 minutes. See "Timeshifting" under AM-FM Radio on page 10.
- Auto Volume: If equipped, this feature adjusts the volume based on the vehicle speed. See AM-FM Radio on page 10.
- Bose AudioPilot Noise
 Compensation Technology:
 If equipped, this feature adjusts
 the volume based on the noise
 in the vehicle. See AM-FM
 Radio on page 10.
- Maximum Start-Up Volume: This feature sets the maximum startup volume. If the vehicle is started and the volume is

- greater than this level, the volume is adjusted to this level. To set the maximum startup volume, press + or to increase or decrease. Press the \$\forall \text{ Back screen button to go back to the previous menu.}
- Audio Cue Volume (If Equipped):
 This feature adjusts the startup and shutdown sounds. To adjust the volume, press + or to increase or decrease. This feature can be turned on or off.

 Press the Back screen button to go back to the previous menu.

Vehicle Settings

See "Vehicle Personalisation" in the owner manual.

Bluetooth

From the Bluetooth screen button, the following may be displayed:

 Add New Device: Press to add a new device.

- Device Management: Press to connect to a different phone source, disconnect a phone, or delete a phone.
- Ringtones: Press to change the ring tone for the specific phone. The phone does not need to be connected to change the ring tone.
- Voice Mail Numbers: This feature displays the voice mail number for all connected phones. The voice mail number may be changed by pressing the EDIT button, typing in the new number, and pressing SAVE. Press the Back screen button to go back to the previous menu.
- Text Message Alerts (If Equipped): This feature will turn text message alerts on or off. Press Text Message Alerts and then select OFF or ON. Press the Sack screen button to go back to the previous menu. See Text Messaging on page 83.

Speech

From the Speech screen button, the following may be displayed:

- Prompt Length: Select Short or Long for shorter or longer voice prompts that are played during voice recognition sessions.
 Press the Back screen button to go to the previous menu.
- Audio Feedback Speed: Press Slow, Medium, or Fast for feedback speed. Press the Back screen button to go back to the previous menu.

Display

From the Display screen button, the following may be displayed:

 Mode: Press Auto, Day, or Night to adjust the display. Press the Back screen button to go to the previous menu.

- Calibrate Touchscreen: Press to calibrate the touchscreen and follow the prompts. Press the \(\) Back screen button to go back to the previous menu.
- Turn Display Off: Press to turn the display off. Press anywhere on the display area or any faceplate button again to turn the display on.

Rear Camera

Press to display the Rear Camera menu. See "Driver Assistance Systems" in the owner manual.

Return to Factory Settings

Pressing Continue restores all factory settings.

Select Return to Factory Settings and the following list may display:

 Restore Vehicle Settings: Restores factory vehicle personalisation settings. Press Restore Vehicle Settings. Press

- Cancel or Continue. Press the ****Backscreen button to go back to the last menu.
- Clear All Private Data: Clears all private information. Press Clear All Private Data. Press Cancel or Continue. Press & Back to go back to the last menu.

English and Metric Unit Conversion

To change the display units between English and metric units, see "Instrument Cluster" in the owner manual.

Trademarks and Licence Agreements

This vehicle has systems that operate on a radio frequency which are in the scope of Directive 1999/5/EC. These systems are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Made for iPhone

"Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod or iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please

note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone[®], iPod[®], iPod classic[®], iPod nano[®], iPod shuffle[®], and iPod touch[®] are trademarks of Apple Inc., registered in the U.S. and other countries.



TouchSense[®] Technology and TouchSense [®] System 1000 Series Licensed from Immersion Corporation. TouchSense [®] System 1000 protected under one or more of the U.S. Patents at the following address www.immersion.com/patent-marking.html and other patents pending.

DTS

Manufactured under license under U.S.Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending.

DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0 Channel is a trademark of DTS, Inc. Product includes software. ©DTS, Inc. All Rights Reserved.

Dolby

Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



ABOUT DIVX VIDEO: DivX is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. go to vod.divx.com for more information on how to complete your registration.

Covered by one or more of the following U.S. patents: 7,295,67; 7,460,668; 7,515,710; 7,519,274.

DivX, DivX Certified and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

BDA

"Blu-ray Disc, Blu-ray, Blu-ray 3D, BD-Live, BONUSVIEW, BDXL, AVCREC, and the logos are trademarks of the Blu-ray Disc Association."

AVCHD

AVCHD and the AVCHD logo are trademarks of Panasonic Corporation and Sony Corporation.

AVCREC

Blu-ray Disc, Blu-ray, Blu-ray 3D, BD-Live, BONUSVIEW, BDXL, AVCREC, and the logos are trademarks of the Blu-ray Disc Association.

Java

Java is a registered trademark of Oracle and/or its affiliates.

Cinavia

Cinavia Notice: This product uses Cinavia technology to limit the use of unauthorised copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorised copy is detected, a message will be displayed or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Centre at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights

reserved by Verance. Reverse engineering or disassembly is prohibited.

RMVB



Portions of this software are included under license from RealNetworks, Inc. Copyright 1995-2011, RealNetworks, Inc. All rights reserved

Bluetooth

The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by General Motors is under license. Other trademarks and trade names are those of their respective owners.

Schedule I: Gracenote EULA



Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

Music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote may apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDB, MusicID, MediaVOCS, the

Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

Gracenote Terms of Use

This application or device contains software from Gracenote, Inc. of Emervville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to do disc or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

This application or device may contain content belonging to Gracenote's providers. If so, all of

the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the

Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the

accuracy of any Gracenote Data. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR

USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES

© 2011. Gracenote, Inc. All Rights Reserved.

Map End User License Agreement

END USER TERMS

The Map Data Disc ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms (this "End User License Agreement") and conditions which are agreed to by you, on the one hand, and NAVTEQ North America, LLC ("NT") and its licensors (including their licensors and suppliers) on the other hand.

TERMS AND CONDITIONS

Personal Use Only: You agree to use this Data for the solely personal, noncommercial purposes for which you were licensed, and not for service bureau, timesharing or other similar purposes. Except as otherwise set forth herein, vou agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may transfer the Data and all accompanying materials on a permanent basis if you retain no copies and the recipient agrees to the terms of this End User License Agreement. Multi-disc sets may only be transferred or sold as a complete set as provided to you and not as a subset thereof

Restrictions

Except where you have been specifically licensed to do so by NT and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications: or (b) with, or in communication with, including without limitation, mobile phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning

This Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used, and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty

This Data is provided to you "as is," and you agree to use it at your own risk. NT and its licensors (and their licensors and suppliers) make no guarantees, representations, or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error free.

Disclaimer of Warranty

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND BOSCH (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT,

MERCHANTABILITY. SATISFACTORY QUALITY. ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY BOSCH (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES, OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

Disclaimer of Liability

NT AND ITS LICENSORS
(INCLUDING THEIR LICENSORS
AND SUPPLIERS) SHALL NOT BE
LIABLE TO YOU IN RESPECT OF
ANY CLAIM, DEMAND OR
ACTION, IRRESPECTIVE OF THE
NATURE OF THE CAUSE OF THE
CLAIM, DEMAND OR ACTION
ALLEGING ANY LOSS, INJURY
OR DAMAGES, DIRECT OR

INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THIS DATA: OR FOR ANY LOSS OF PROFIT. REVENUE. CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL. SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS DATA. ANY DEFECT IN THIS DATA. OR THE BREACH OF THESE TERMS OR CONDITIONS. WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF NT OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories, and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control

You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations. Entire Agreement: These terms and conditions constitute the entire agreement between NT (and its licensors. including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law

The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly

excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims, and actions arising from or in connection with the Data provided to you hereunder.

Government End Users

If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with this End User License Agreement, and each copy of Data

delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and be treated in accordance with such Notice:



NOTICE OF USE

CONTRACTOR (MANUFACTURER/ SUPPLIER)

NAME:

NAVTEQ

CONTRACTOR (MANUFACTURER/ SUPPLIER)

ADDRESS:

425 West Randolph Street, Chicago, IL 60606.

This Data is a commercial item as defined in FAR 2.101 and is subject to the End User License Agreement under which this Data was provided.

© 2012 NAVTEQ. All rights reserved

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

ONX

Portions of this software are copyright © 2008-2011, QNX Software Systems. All rights reserved.

Part C - EULA

Copyright 2011, Software Systems GmbH & Co. KG. All Rights Reserved.

The product you have purchased ("Product") contains Software (Runtime Configuration No. 505962: "Software") which is distributed by or on behalf of the Product manufacturer "Manufacturer") under license from Software Systems Co. ("QSSC"). You may only use the Software in the Product and in compliance with the license terms below.

Subject to the terms and conditions of this License, QSSC hereby grants you a limited, non-exclusive, non-transferable license to use the Software in the Product for the purpose intended by the Manufacturer. If permitted by the Manufacturer, or by applicable law, you may make one backup copy of the Software as part of the Product software. QSSC and its licensors reserve all license+C31 rights not expressly granted herein, and retain all right, title and interest in and to all copies of the Software, including all intellectual property rights therein. Unless required by

applicable law you may not reproduce, distribute or transfer, or de-compile, disassemble or otherwise attempt to unbundle. reverse engineer, modify or create derivative works of, the Software. You agree: (1) not to remove, cover or alter any proprietary notices, labels or marks in or on the Software, and to ensure that all copies bear any notice contained on the original; and (2) not to export the Product or the Software in contravention of applicable export control laws.

EXCEPT TO THE EXTENT OTHERWISE REQUIRED BY APPLICABLE LAW, QSSC AND ITS LICENSORS PROVIDE THE SOFTWARE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND. EITHER EXPRESS OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OR CONDITIONS OF TITLE. NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS

FOR A PARTICULAR PURPOSE.
ANY WARRANTIES OR OTHER
PROVISIONS OFFERED BY THE
MANUFACTURER OR ITS
DISTRIBUTOR(S) THAT DIFFER
FROM THIS LICENSE ARE
OFFERED BY THE
MANUFACTURER OR ITS
DISTRIBUTOR(S) ALONE AND
NOT BY QSSC, ITS AFFILIATES
OR THEIR LICENSORS. YOU
ASSUME ANY RISKS
ASSOCIATED WITH YOUR USE
OF THE SOFTWARE UNDER THIS
LICENSE.

EXCEPT TO THE EXTENT
OTHERWISE REQUIRED BY
APPLICABLE LAW (SUCH AS IN
THE CASE OF DELIBERATE OR
GROSSLY NEGLIGENT ACTS), IN
NO EVENT SHALL QSSC, ITS
AFFILIATES OR THEIR
LICENSORS BE LIABLE TO YOU
UNDER ANY LEGAL THEORY,
WHETHER IN TORT (INCLUDING
NEGLIGENCE), CONTRACT OR
OTHERWISE, FOR DAMAGES,
INCLUDING ANY DIRECT,

INDIRECT, SPECIAL, INCIDENTAL. OR CONSEQUENTIAL DAMAGES OF ANY CHARACTER ARISING AS A RESULT OF THIS LICENSE OR OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOSS OF GOODWILL. WORK STOPPAGE. PRODUCT FAILURE OR MALFUNCTION, OR ANY AND ALL OTHER COMMERCIAL DAMAGES OR LOSSES), EVEN IF QSSC, ITS AFFILIATES OR THEIR LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

For more information on the Software, including any open source software license terms (and available source code) as well as copyright attributions applicable to the Runtime Configuration indicated above, please contact the Manufacturer or contact QSSC at 175 Terence Matthews Crescent, Kanata, Ontario, Canada K2M 1W8 (licensing@qnx.com).

Linotype

Helvetica is a trademark of Linotype Corp. registered in the U.S. Patent and Trademark Office and may be registered in certain other jurisdictions in the name of Linotype Corp. or its licensee Linotype GmbH.

Usage in text form of each of the Licensed Trademarks is:

The trademark attribution requirements for the Licensed Trademarks may be viewed at http://www.linotype.com/2061-19414/trademarks.html.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

96	Infotainment System	
		∧ NOTES

Α	В	D
AM 15 Befo AM-FM Radio 10 Blue Antenna Ove Multi-band 16 Blue Applications Tray 6 Cand Apps 5 Call Audio 5 Call Bluetooth 24 Cand Audio Output 39 Card CD 16 CD F Audio System 77 Cina Radio Reception 15 Clea Auxiliary Inputs 38 Rac Auxiliary Jack 23 Clea AVCHD 88 Clim AVCREC 88 Cont	88 re Driving	Database Coverage Explanations 69 Destination, Navigation 52 Detailed Areas 50 Display 66, 86 Dolby 87 Driving on a Route 51 DTS 87 Dual Tone Multi-Frequency (DTMF) Tones 81 DVD Rear Seat Entertainment 25 E Ending a Call 81 Energy 5 English and Metric Unit Conversion 86 Error Messages 18

i-2 INDEX

F	J	Messaging
Finding a Station	Jack Auxiliary 23 Java 88	Text
System (GPS)	Language	NAV (Navigation, If Equipped) 5 Navigation
Haptic Feedback	Making a Call	Destination
I f the System Needs Service	and Recent Calls	Pairing

Port USB 19 Power (On/Off/Mute) 4 Problems with Route 68 Guidance 68 Proximity Sensing 6 R 84 Radio 84 Radio Data System (RDS) 12 Radios 10 AM-FM Radio 10 Reception 15 Rear Camera 86 Rear Climate (If Equipped) 6 Rear Seat Entertainment 25 Remote Control 40 Return to Factory Settings 86 RMVB 89 RSE Controls Available from the Front Screen 34	S Schedule I: Gracenote EULA 89 Scroll Features 48 SD Card Reader 23 Settings 66, 84, 5 Software Updates 10 Sources 26 Speech 86 Steering Wheel Controls 9 Storing and Recalling Media Favourites Favourites 22 Storing Radio Station Presets 12 Switching to Handset or Handsfree Mode 79 Symbols, Navigation 50 System Infotainment 3 System Needs Service 69 System Operation 25	T Text Menu Text Messaging Text Settings Three-Way Calling Time and Date Timeshifting (If Equipped) Touchscreen Buttons Turn List U Updates Map Data Software USB Port Using Bluetooth Voice Recognition Using Voice Recognition Using Voice Recognition for List Options	83 84 84 63 63 63 19 70

i-4 INDEX

V
Valet Mode (If Equipped) 84
Vehicle
Positioning67
Vehicle Settings 85
Video (If Equipped) 6
Video Display Error Messages 43
Video Distortion
Viewing a Text Message 83
Viewing Sender Information 83
Voice
Voice Mail 81
Voice Recognition69
Voice Recognition for Audio
My Media73
Voice Recognition for
Navigation75
Voice Recognition for the
Phone
Voice Recognition for the
Radio73
\/olumo /